

INSTRUCTION MANUAL

DRA90 Asphalt Roller



SERIAL NUMBER:
10300612CME010544

ENGINE:
Dynapac- 4R1040T
Part Number:
4812331115_B-EN



Manual Revisions

Table 1: Revision History

| REV. NO. | DATE | REVISION |
|----------|-----------|-------------------------------------|
| 1 | Sept 2021 | New released |
| 2 | June 2022 | Revised with new branding guideline |

Customer Acknowledgment

- Dynapac reserves the right to make any changes or modifications without prior notice and without incurring any liability to retrofit machines previously shipped from the factory.
- Dynapac will not be held responsible for any damages caused by unauthorized modification of the machine and its associated equipment.
- The manufacturer is not liable for damages caused by inappropriate use.
- Damage that occurs as a result of substandard repairs, as well as injury to personnel or damage to equipment that is attributable to older un-repaired damage, is not covered by the customer warranty policy. Always refer to your customer warranty policy.
- Always refer to equipment documentation for correct operation and repair procedures.

Table of Contents

Section 1: Introduction

| | |
|---|---|
| 1.1 General Information..... | 1 |
| Instruction Manual Location..... | 2 |
| Receiving the Roller..... | 2 |
| Identification Data..... | 2 |
| Roller Identification..... | 3 |
| Engine Identification..... | 4 |
| 1.2 Roller Description..... | 5 |
| Identification of Major Components..... | 5 |
| Diesel Engine..... | 6 |
| Electrical System..... | 7 |
| Main and Light Fuses..... | 7 |
| Propulsion System/Transmission..... | 8 |
| Brake system..... | 9 |
| Secondary/Parking Brake..... | 9 |
| Steering System..... | 9 |
| Roller Applications..... | 9 |
| Designated Applications..... | 9 |
| Non-Designated Applications..... | 9 |

Section 2: Safety First

| | |
|--------------------------------------|----|
| 2.1 General Information..... | 11 |
| Warnings and Cautions..... | 12 |
| Personnel Protective Equipment..... | 12 |
| Tools and Equipment..... | 12 |
| Operating Safety..... | 13 |
| Before Starting the Engine..... | 13 |
| Starting the Roller..... | 13 |
| Parking the Roller..... | 13 |
| Driving Near Edges..... | 13 |
| Slopes..... | 14 |
| Hydraulic Maintenance Safety..... | 14 |
| Cylinder Repairs or Replacement..... | 14 |
| Handling Fluids and Oil..... | 14 |
| Transporting..... | 15 |
| 2.2 Equipment Safety Decals..... | 16 |

Table of Contents

Section 3: Special Instructions

| | |
|--|----|
| 3.1 Operational Limitations | 17 |
| Standard Lubricants and Other Recommended Oils and Fluids..... | 17 |
| Higher Ambient Temperatures..... | 17 |
| Lower Ambient Temperature - Freeze Risk | 17 |
| Temperatures..... | 17 |
| High Pressure Cleaning..... | 18 |
| Ambient Temperature Range | 18 |
| Operating Conditions For Stability | 18 |
| Grade Limitations | 18 |
| Fire Fighting | 18 |
| Battery Handling..... | 18 |
| Jump Starting..... | 19 |

Section 4: Specifications

| | |
|---------------------------------|----|
| 4.1 Weight and Dimensions | 21 |
| Diesel Engine | 22 |
| Fluid Volume | 23 |
| Working Capacity | 23 |
| Hydraulic System | 23 |

Section 5: Operation Controls

| | |
|--------------------------------------|----|
| 5.1 Instruments and Controls..... | 25 |
| Starter Switch..... | 26 |
| Throttle Lever | 26 |
| Vibration On/Off Switch | 26 |
| Emergency Stop..... | 27 |
| Forward/Reverse (FNR) Lever | 27 |
| Sprinkler Switch..... | 27 |
| Seat Buzzer..... | 27 |
| Horn Button | 28 |
| Vibration High/Low Switch..... | 28 |
| Vibration Selector Switch..... | 28 |
| Fuse Box..... | 28 |
| Driving Lights Switch | 28 |
| Working Light Switch(Optional) | 29 |

| | |
|--|----|
| Hazard Warning Lights Switch | 29 |
| Rotating Beacon Switch (Optional)..... | 29 |
| Direction Indicator Switch | 29 |
| Parking Brake On/Off Switch | 29 |
| Control Panel | 30 |
| Control Panel Warnings Symbols..... | 31 |
| Control Panel Notification Symbols | 32 |

Section 6: Inspections and Operations

| | |
|---------------------------------------|----|
| 6.1 General Information..... | 33 |
| General Checks | 33 |
| Operator Areas..... | 33 |
| Check Engine Oil Level | 34 |
| Check Engine Coolant Level | 34 |
| Check Fuel Level | 35 |
| Check Batteries | 35 |
| Verify the Controls..... | 35 |
| 6.2 Before Starting the Engine | 36 |
| Seat(Standard) Adjustment | 36 |
| Check the Instruments and Lamps | 37 |
| Interlock | 37 |
| 6.3 Operating the Roller | 38 |
| Operation | 38 |
| Vibration on Selected Drum..... | 39 |
| Braking..... | 39 |
| Normal Braking | 39 |
| Emergency Braking | 39 |
| Switching Off | 40 |
| 6.4 Lifting and Handling..... | 41 |
| Locking the Articulation | 41 |
| Lifting the Roller | 41 |
| 6.5 Towing the Roller | 42 |
| Towing Information..... | 42 |
| Towing | 42 |

Table of Contents

| | |
|---------------------------------------|----|
| 6.6 Transporting the Roller..... | 44 |
| Transportation Procedures | 44 |
| Safety Precautions | 44 |
| Operator Checklist | 44 |
| Start Up | 44 |
| Before Driving | 44 |
| Roller preparation for Transport..... | 45 |
| 6.7 Special Conditions | 47 |
| Cold Weather Conditions..... | 47 |
| Hot Weather Conditions..... | 47 |
| High Altitude Conditions | 47 |
| Long-term Parking | 47 |

Section 7: Maintenance

| | |
|--|----|
| 7.1 General Information | 49 |
| 7.2 Maintenance Schedule | 50 |
| Maintenance Schedule Information | 50 |
| 7.3 Refill Capacities/Lubricants..... | 53 |
| General Information..... | 53 |
| Lubrication Chart..... | 54 |
| Refill Capacities..... | 54 |
| 7.4 Standard Torque Values | 56 |
| Head Markings | 56 |
| Recommended Torques | 56 |
| 7.5 Maintenance as Required | 58 |
| Service as Required | 58 |
| Clean the Roller..... | 58 |
| Loose Bolted Connections | 58 |
| Air Cleaners..... | 58 |
| Connections and Ducts..... | 58 |
| Air Cleaner Pre-Cleaner..... | 59 |
| Air Cleaner Main Filter | 59 |
| Cleaning the Filter Element..... | 60 |
| Air Circulation..... | 60 |
| Hose and Clamps..... | 60 |
| Engine | 61 |
| Batteries | 61 |
| Check Electrolyte Level | 62 |

Table of Contents

| | |
|--|----|
| Fuel Tank | 62 |
| Water Tank | 63 |
| Brakes | 64 |
| Sprinkler System | 64 |
| 7.6 Lubrication and Filters | 65 |
| Hydraulic Reservoir | 65 |
| Check Hydraulic Oil Level | 65 |
| Steering Cylinder and Steering Joint | 66 |
| Drum - Oil Level | 66 |
| Check Drum Gear Oil Level | 67 |
| Controls | 67 |
| Housekeeping | 67 |

This page is intentionally blank

Section 1: Introduction

1.1 General Information

This manual contains basic safety information, basic operation instructions, and preventive maintenance information of the Dynapac DRA90 roller.

The purpose of this manual is to provide the knowledge of the fundamental rules and criteria to be followed for on-site use and maintenance of the DRA90 roller for the operator and site maintenance personnel.

The operator and site maintenance personnel must read and fully understand this instruction manual before operating or servicing the roller. This manual has been organized to present the safety precautions, operation requirements, and appropriate information needed to:

- Safely operate the DRA90 roller while achieving optimum production.
- Understand the operating principal of each system associated with the DRA90 roller.
- React effectively and safely to emergency and alarm conditions.
- Perform the necessary pre-operational and post-operational checks on the roller.


If any part of this manual cannot be understood, contact the supervisor or local Dynapac distributor. This is an essential condition for working safely with the roller. The correct roller operation, use, and regular maintenance are also essential elements to provide the highest performance and safety.

Note Always keep the Safety and Instruction manuals on the roller and available to the operator and the helper. Always provide the model and serial number of the roller when contacting the local Dynapac service or parts office.

Instruction Manual Location

The instruction manuals are located behind the operator seat within easy access.

Figure 1-1: Instruction manual Location

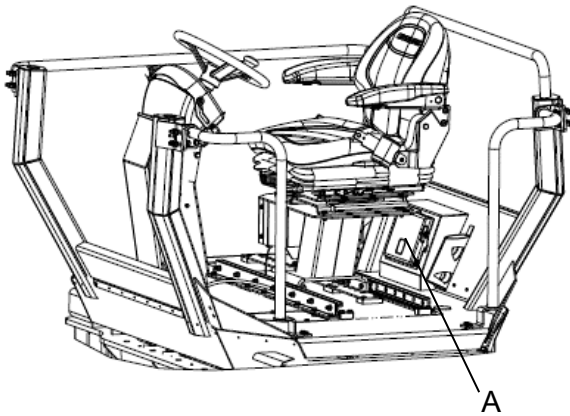

A Manual location

Receiving the Roller

The roller has been tested, accurately checked, and prepared for shipment. Every part of the roller is accurately checked before being shipped from the factory.

When receiving the roller and before unpacking the equipment, check if damage has occurred during transport and if any parts are missing.

Check the equipment by consulting the shipment documents.

If the goods are damaged or if parts are missing, inform the freight agent and raise a complaint against it.

Identification Data

An exact description of the model type and the serial number of the roller facilitates fast and efficient response from our parts and service support operations.

Provide the model type and serial number while contacting the local Dynapac service or parts office.

Enter the roller data on the following lines to maintain the roller and engine information necessary to facilitate fast and efficient response from our parts and service support operations:

Model: _____

Roller Serial
Number: _____

Chassis VIN
Number: _____

Year of
Manufacture: _____


Engine (Mfg. and Type of
Engine): _____

Engine Serial
Number: _____

Roller Identification

The roller product identification number (PIN) plate is located on left hand side of the engine frame. The PIN number is a 17 digit number which provides information about manufacturer, family model, check letter, no coding, production unit, and serial number.

Figure 1-2: Location PIN

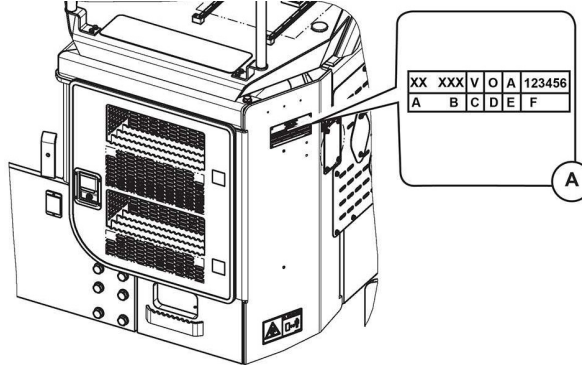


A Serial number

- A Manufacturer
- B Family/Model
- C Check latter
- D No coding
- E Production unit
- F Serial number

The pin number is punched on top-right side of the side plate.


Figure 1-3: Location PIN

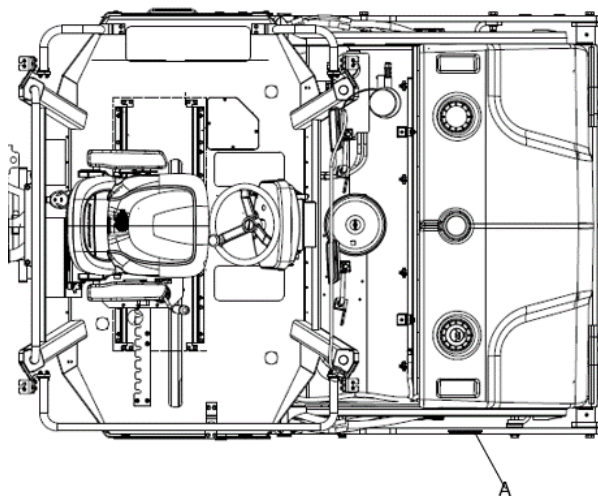

A Pin number

Engine Identification

Figure 1-4: Identification Plate

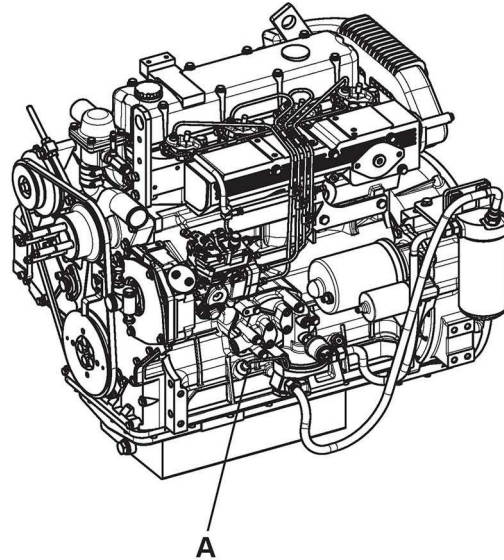

A *Engine identification plate*

The engine identification plate is affixed to the right side of the engine. The engine identification plate provides model identification and other important data about the engine. Refer to the engine operation and maintenance manual for further information on the identification information. Have the following engine data available when communicating with an authorized repair location. The data on the engine identification plate is mandatory when sourcing service parts:

- Engine serial number
- Model

1.2 Roller Description

The roller is a two self-propelled vibratory tandem rollers in the nine-metric tons class featuring 1690-mm wide drums. The roller is equipped with drive, brakes, and vibration on both drums.

To permit optimum performance on a wide range of applications and site requirements, the roller is equipped with:

- Diesel engine
- Electrical system
- Propulsion system/transmission
- Brake system
- Secondary/parking brake
- Steering system
- Canopy

Identification of Major Components


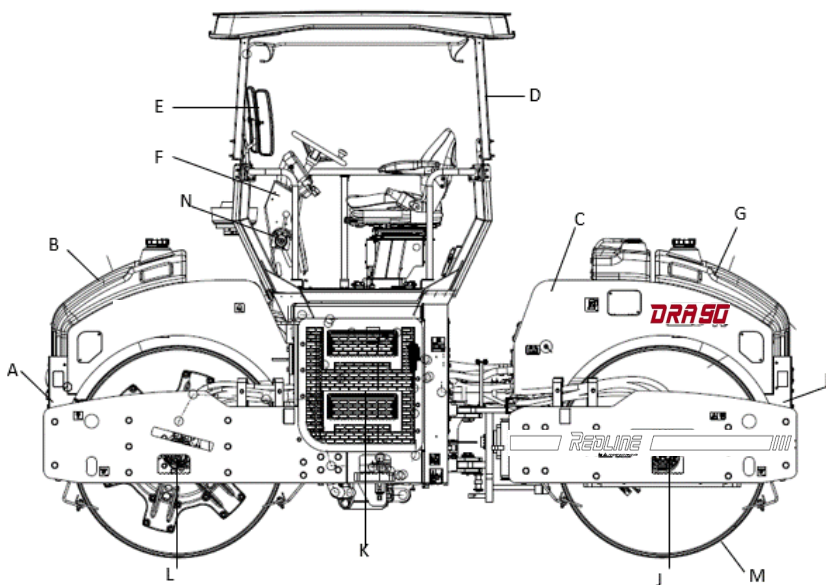


Figure 1-5: Major Components Left Side

| | | |
|-------------------------|---------------------------|--------------------------|
| <i>A Head light</i> | <i>E Mirror</i> | <i>J Vibration motor</i> |
| <i>B Water tank</i> | <i>F Steering console</i> | <i>K ROC</i> |
| <i>C Hydraulic tank</i> | <i>G Water tank</i> | <i>L Drive motor</i> |
| <i>D Canopy</i> | <i>H Rear Light</i> | <i>M Drum</i> |
| <i>N Throttle lever</i> | | |

Figure 1-6: Major Components Right Side

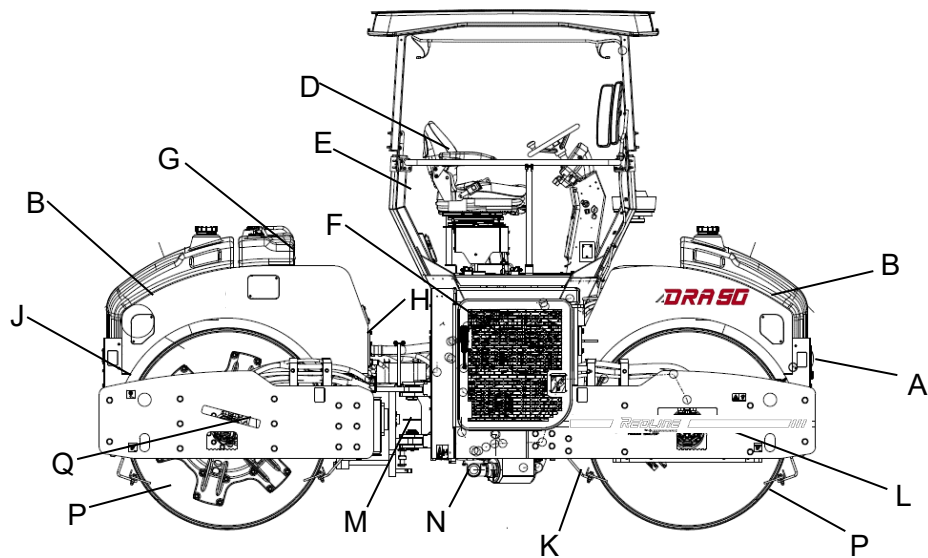

- | | | | | | |
|---|----------------|---|-----------------|---|-------------|
| A | Head light | G | Fuel tank | N | Cylinder |
| B | Water tank | H | Hydraulic tank | P | Drum |
| D | Seat | J | Rear light | Q | Drive motor |
| E | Platform | K | Scrapper | | |
| F | Engine | L | Vibration motor | | |
| M | Steering hitch | | | | |


Diesel Engine

The roller is equipped with the water-cooled, straight four cylinder BS II diesel engine.

Electrical System


The roller is equipped with 12-V electrical system and 90-A AC alternator.

Figure 1-7: Electric System

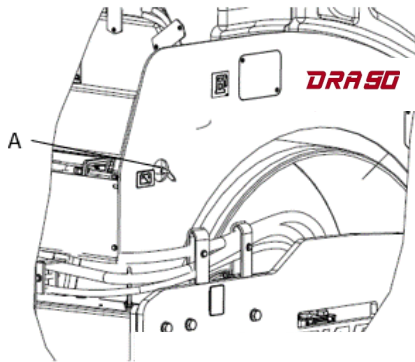

A Battery disconnecter

Figure 1-8: Fuses-View A

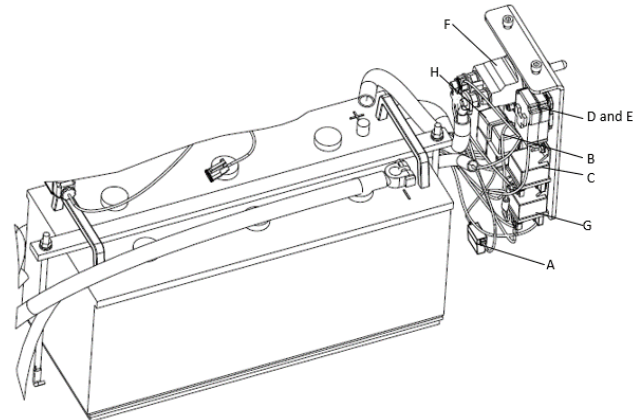

A 10-A Fuse

D and E 40-A Main and Light fuse

B 30-A Mini Relay

F Battery Disconnecter switch

C 75-A Starter Relay

G 100-A Fuel Solenoid

H 30-A Mini Relay


Main and Light Fuses

The main fuse and light fuse are placed near to a 75A starter relay on battery disconnecter bracket.

Table 1-1: Placement of Fuses


| | | |
|-----|------------|------|
| F10 | Main fuse | 40 A |
| F11 | Light fuse | 40 A |

Figure 1-9: Fuses- View B

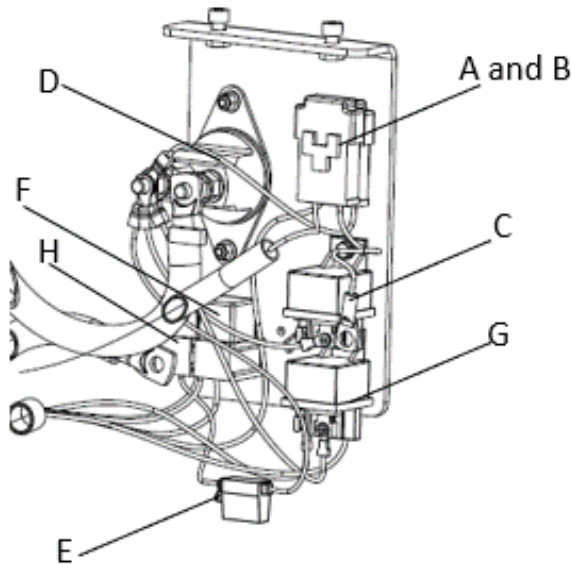

- A and B Main and light fuse
- C Starter relay
- D Battery disconnect switch
- G Fuel Solenoid
- E 10-A fuse for back up alarm
- F 30-A mini relay for back up alarm

Figure 1-10: Fuse Boxes in Switch Box

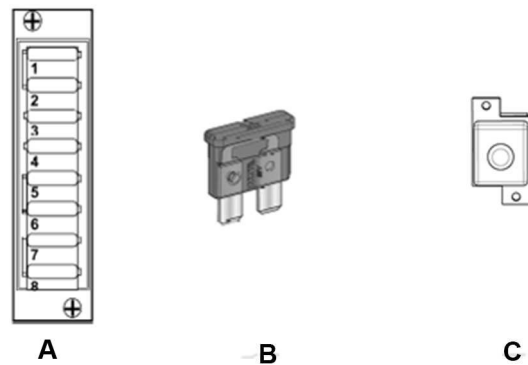

- A Fuse box
- B Fuse
- C Fuse for Driving Lights

The flat pin, type C (medium) fuses and 20-A fuse are used for driving lights.

Table 1-2: Fuse Function and Amperage

| SI.No | Function | Amperage |
|-------|---|----------|
| 1 | Main fuse (Ignition/emergency/ ECU/vibration) | 15 A |
| 2 | Working light and Dyn@link | 15 A |
| 3 | sprinkler pump | 10 A |
| 4 | Rotating beacon fuse/Sprinkler switch | 10 A |
| 5 | Dual Speed / Back up alarm switch | 15 A |
| 6 | Spare | 10 A |
| 7 | NSS/ Flash Relay | 20 A |
| 8 | ECU | 30 A |

Table 1-3: Driving light Fuse

| SI.No | Function | Amperage |
|-------|----------------|----------|
| 1 | Driving lights | 20 A |
| 2 | Spare | 15 A |

Propulsion System/ Transmission

The propulsion system is a hydrostatic system with a hydraulic pump supplying two motors with gear box connected in parallel. The motors drive the front and rear drums.

The speed of the roller is proportional to the deflection/angle of the control lever from neutral.

Brake system

The brake system consists of a service brake, secondary brake and parking brake. The service brake is hydrostatic and is activated by moving the control lever to neutral.

Secondary/Parking Brake

The secondary and parking brake system consists of spring multiple disc brakes in the drive gear box. The brakes are released with hydraulic pressure and are operated with a switch on the instrument panel.

Steering System

The steering system is a hydrostatic system. The control valve on the steering column distributes the flow to the control cylinder, which actuates the articulation.

The steering angle is proportional to the deflection of the steering wheel.

Roller Applications

The roller is built in accordance with international standards and recognized safety rules. Nevertheless, misuse may constitute a risk to the life and limb of the user or third parties and may cause damage to the roller or other material property.

The roller must be used in accordance with its designated use as described in this manual. The roller must only be operated by trained, safety-conscious persons who are fully aware of risks involved in operating the roller. Any functional disorders, especially those affecting the safety of the roller, must be corrected immediately.

Designated Applications

The roller is designed primarily to compact thin and thick asphalt layers with respect to dual vibration amplitudes optimized for this purpose. It is also used to compact granular soil, sand, or gravel.

Non-Designated Applications

The roller is not designed to use as a ladder, support, or a work surface. It is not used to carry or transport passengers or equipment. The manufacturer/supplier cannot be held liable for any damage resulting from such use. The risk of such use lies entirely with the user.

Operating the roller within the limits of its designated use also involves compliance with the inspection and maintenance directives contained in the operating manual.

This page is intentionally left blank

Section 2: Safety First

2.1 General Information

This information is intended as a guide for trained and qualified personnel who are aware of the dangers involved in handling potentially hazardous equipment. It is not intended to contain a complete list of all safety precautions which should be observed by personnel using this equipment.

Before you operate, maintain, work around, or in any other way use this equipment:

Note Read and study the Safety Manual, and this Instruction Manual.

Note Ensure that all instructions in the maintenance section are followed. Failure to obey instructions or warnings could result in injury or death.

- Those who operate, maintain, and work on roller must be competent.
- The maintenance and service of this roller involves risks both to personnel and roller and must be performed only by qualified personnel exercising caution.
- Personnel engaged in the operation, maintenance, or servicing of this roller are urged to become familiar with First Aid theory and practices.
- During operation of this roller, local safety, and fire protection standards must be observed.
- Do not use the roller in need of adjustment or repair. Mount and dismount the roller when it is stationary. Use the intended grips and rails. Always use the three-point grip (both feet and one hand, or one foot and both hands) when mounting or dismounting the roller. Do not jump on or off a moving roller.
- Drive slowly and carefully during the sharp bends or during the uneven ground.
- Avoid driving across slopes. Drive straight up or straight down the slope.
- Fasten the seat belt while driving.
- Replace all the lost and damaged safety labels.
- Keep the roller in good working condition.
- Safety measures during refueling:
 - Make sure to stop the engine.
 - Do not smoke.
 - Do not use naked flames in the vicinity.
 - Ground the nozzle of the filling device against the tank to prevent sparks.

This safety summary includes general safety precautions and instructions that must be understood and applied during operation and maintenance to make sure personnel safety and protection of equipment. Before performing any task, the WARNINGS, CAUTIONS, and NOTES included in that task shall be reviewed and understood.

Warnings and Cautions

Throughout the manual, Warnings, Cautions, and Notes symbols are used to designate instructions of particular importance. Look for these symbols which point out items of extreme importance to you and your co-workers' safety. Read and understand thoroughly. Heed the warning and follow the associated instructions. In this manual, these terms have the following significance:



WARNING! Marks a danger or a hazardous procedure that can result in life threatening or serious injury if the warning is ignored.



CAUTION! Marks a danger or hazardous procedure that can result in damage to the roller or property if the warning is ignored.

Note Note is used for supplementary information not directly effecting safety or damage to equipment. Note can also refer to special information on the efficient use of the roller.

Modifications

The roller is designed for safe operation. Do not do anything that may hamper the safety features or structural integrity of the roller.

Do not make any unauthorized modifications to this roller. Dynapac cannot be held responsible for any accidents, incidents, or damage to persons or property that are related to the use of modified roller.

Personnel Protective Equipment

Anyone working around the roller must wear approved safety equipment (safety shoes or protective footwear, safety glasses, hearing protection, hard hat, gloves, respirator, and the like) when operating or maintaining the roller. Wear close fitting clothing and confine long hair. Operating requires full attention of the operator. Do not wear radio or music headphones while operating.

Tools and Equipment



Tools, lifting gear, fastening devices, jacks, and other working equipment must be in safe operational working conditions.



Equipment or components which are being fitted or removed or where their installation position is being changed, must be secured against unintentional movement, slipping, or falling over. Use suitable lifting gear or suspension/ support devices.



Systems and units (tensioning units) must be depressurized in an appropriate manner before opening.



Damaged hydraulic or mechanical pre-tensioned spring elements must be exchanged as a completed unit. Further information can be found in the respective component descriptions and/ or fitting and removal instructions.

Operating Safety

Know the working area. Familiarize with work site obstructions and any other potential hazards in the area.

Before Starting the Engine

- Inspect the roller for potential hazards.
- Adjust the rear-view mirrors for good visibility.
- Make sure that the controls are in the neutral position and the parking brake is applied.
- Make sure that there is no one in the immediate vicinity and there are no obstructions around the roller.

Starting the Roller

- Do not start the engine or move any of the controls if there is a warning tag attached to the controls. Check with the person who attached the tag before starting.
- Read and follow all the instruction decals.
- Before starting the engine, check that all the gear controls are in neutral position.
- Always inspect the motor before and after starting.
- Check all the safety devices. Report any defects immediately.
- Listen for unusual noises.
- Engage hydraulic controls slowly in cold weather to avoid shock loading.

Parking the Roller

- Select the level and hard ground. If necessary to park on the slope, block the front of the drums on the downside of the slope.
- Apply break in emergency conditions.


Driving Near Edges

While driving near an edge make sure to maintain 2/3 of the drum width on the solid ground.

Note The roller's center of gravity moves outwards when steering. For example, the center of gravity moves to the right when you steer to the left.

Note Never operate roller on side slopes. The roller may roll over, even on stable ground. Always operate the roller parallel to the slope; never perpendicular.

Figure 2-1: Position of the Drum

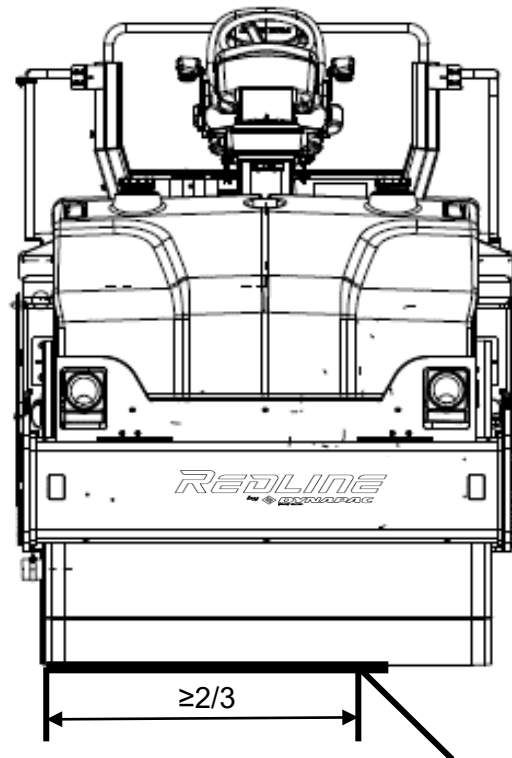


Slopes

The slope angle is measured on a hard, flat surface with the roller stationary. The steering angle was zero, the vibration was switched OFF and all tanks were full.

Always take into consideration that loose ground, steering the roller, vibration on, roller speed across the ground and raising the center of gravity can cause the roller to topple at smaller slope angles than those specified here.

Figure 2-2: Operating on the Slopes

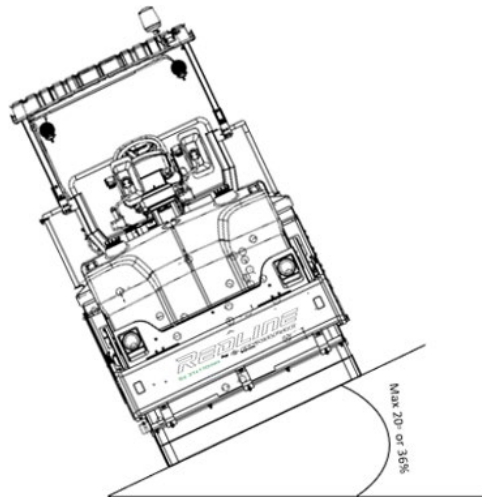

Hydraulic Maintenance Safety

The normal operating temperature of hydraulic oil is hot enough to cause serious burns. Use precautions when working on any hot fluid lines or changing filters.



Hot oil or components can burn. Avoid contact with hot oil or components. Do not allow used oil to drain into the ground. Dispose the used oil properly in accordance with the local guidelines.

Cylinder Repairs or Replacement

- When repairing cylinders, make sure to block them up to prevent dropping or rolling off the roller.

Handling Fluids and Oil

- When draining fluids, make sure that adequate sealable containers are available, and take care to prevent spillage.
- Always make sure waste fluids are disposed in an environmentally safe manner.
- Always make sure that used filters are stored in secure containers and disposed of in an environmentally safe manner.
- Do not use used oil for oil change.


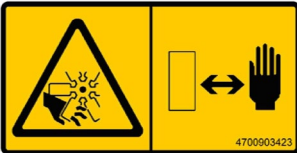





Transporting

- Use only appropriate means of transport and lifting gear of adequate capacity.
- Fastening of loads and instructing the crane operators should be entrusted to the experienced persons only. The person giving the instructions must be within sight or sound of the operator.
- Do not attempt to load the roller on the transport vehicle without knowledge and experience with the operation of the roller.
- Use proper chock blocks in front and rear of the wheels of the transport vehicle when loading the roller.
- Position the roller on the transport vehicle centered from side to side and use proper chock blocks in front and rear of the tracks.
- Secure the roller to the deck of the transport vehicle with adequate chains or cables and blocks to meet local regulations.
- When moving the roller on public access roads, obey all traffic regulations and make sure that proper clearance flags, lights, and warning signs are properly displayed. Never turn corners at excessive speeds. Look in all directions before reversing the travel direction.
- Make sure that hitch of the transport vehicle is properly locked before transporting the roller.

2.2 Equipment Safety Decals

Before you operate, maintain, work around, or in any other way use this roller, read and understand the safety decals and safety labels located on the roller. Follow all directions on the labels. Do not remove or deface the labels. Replace them if they become damaged or lost

Table 2-1: Decal List

| Decal | Message | Location |
|---|--------------------------------------|--|
|  | Warning - Crush zone | Quantity 2: Engine frame left and right bottom side. |
|  | Warning - Rotating engine components | Quantity 1: Engine frame left top side. |
|  | Warning: Hot surfaces | Quantity 1: Engine frame front center side on grill. |
|  | Warning: Instruction manual | Quantity 1: - Center of cancel cover below steering wheel. |
|  | Warning - Risk of crushing | Quantity 2: Front left and right-side plate. |
|  | Warning: Combustible Gas | Quantity 1: Engine frame rear top side. |
|  | Warning: Brake Disengagement | Quantity 1: Engine frame rear bottom left side. |

Section 3: Special Instructions

3.1 Operational Limitations

Standard Lubricants and Other Recommended Oils and Fluids

Before leaving the factory, the systems and components are filled with the oils and fluids specified in the lubricant specification. These are suitable for:

- Ambient temperatures in the range of 4°C to +50°C (39.2°F to 122°F)

Higher Ambient Temperatures

For operation of the roller at higher ambient temperatures, however maximum +50°C (122°F).

The diesel engine can be run at this temperature using normal oil.

Hydraulic system - mineral oil Dynapac Hydraulic 300.

Lower Ambient Temperature - Freeze Risk

Make sure that the watering system is empty/drained of water (sprinkler, hoses, tank/s) or that anti-freeze has been added, to prevent the system freezing.

Temperatures

The temperature limits apply to standard versions of rollers.

High Pressure Cleaning

Do not spray water directly onto electrical components or the instrument panels.

Place a plastic bag over the fuel filler cap and secure with a rubber band. This is to avoid high pressure water entering the vent hole in the filler cap. This could cause malfunctions, such as the blocking of filters.

Do not spray with high-pressure cleaner directly onto gaskets and bearing spacings in steering hitch.



Do not spray water directly onto electrical components or the instrument panels. Place a plastic bag over the fuel filler cap and secure with a rubber band. This is to avoid high pressure water entering the vent hole in the filler cap. This could cause malfunctions, such as the blocking of filters.

Ambient Temperature Range

The ambient temperature working range between limits of 4°C to +50°C (39.2°F to 122°F).

Operating Conditions For Stability

Stability is affected by the orientation of the roller, surface stability (bearing strength), and wind conditions.



Travel at a safe speed relevant to surrounding conditions.

Contact the local Dynapac distributor, dealer, or service office for further information.

Note Specifications represented are calculated values at 100% efficiency.



Operator life may be endangered if the following is not complied with. Do not add attachments to the roller that intrude into the operator protective area, reduce visibility, restrict emergency exits, or add weight exceeding certification weight. See the operation manual or contact the dealer for complete inspection requirements and maintenance instructions.

Grade Limitations

Exceeding the slope or grade limitations of the roller and its configuration can cause the roller to tip over. Prior to moving the roller into position, always determine the safe operating grade of the roller.

Fire Fighting

If the roller catches fire, use an ABC-class powder fire extinguisher.

A BE-class carbon dioxide fire extinguisher can also be used.

Battery Handling



When removing batteries, always disconnect the negative cable first.



When fitting batteries, always connect the positive cable first.



Dispose old batteries in an environmentally friendly way. Batteries contain toxic lead.



Do not use a quick charger for charging the battery. This may shorten the battery life.

Jump Starting




Do not connect the negative cable to the negative terminal on the dead battery. A spark can ignite the oxy-hydrogen gas formed around the battery.



Check the battery used for jump starting has the same voltage as the dead battery.

1. Turn off the ignition and all power consuming equipment.
2. Switch off the engine on the roller which is providing jump start power.
3. Connect the jump start battery's positive terminal (A) to the flat battery's positive terminal (B).
4. Connect the jump start battery's negative terminal (C) to, for example, a bolt (D) or the lifting eye on the roller with the flat battery.
5. Start the engine on the power providing roller. Let it run for a while. Now try to start the other roller.
6. Disconnect the cables in the reverse order.

Figure 3-1: Jump Starting

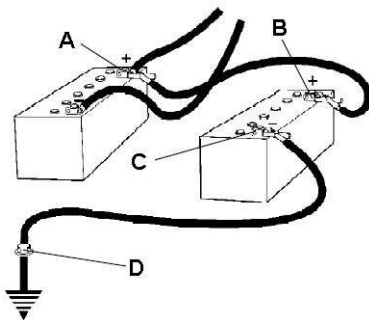

- A Battery's positive terminal one
- B Battery's positive terminal two
- C Battery's negative terminal three
- D Battery's negative terminal four

This page is intentionally left blank

Section 4: Specifications

4.1 Weight and Dimensions

Figure 4-1: Dimensions, Side View

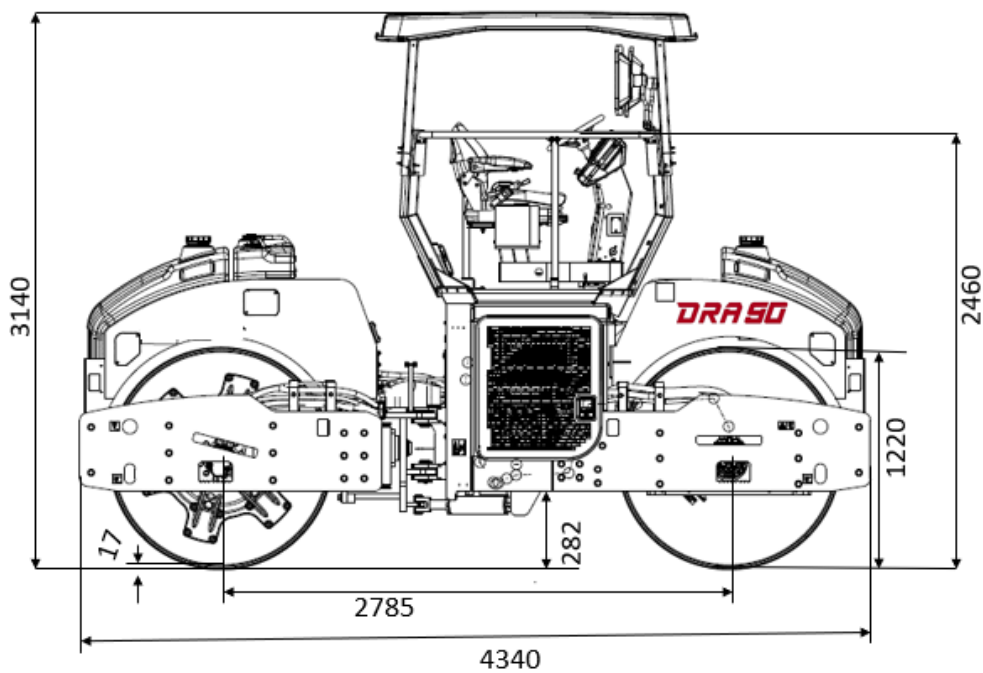


Table 4-1: Weight and Dimensions Side View

| | |
|------------------------|-----------------------|
| Wheelbase | 2785 mm (109.6 in) |
| Length | 4340 mm (170.9 in) |
| Height, with canopy | 3060 mm (120.5 in) |
| Height, without canopy | 2400 mm (94.5 in) |
| Thickness | 17 mm (0.7 in) |
| Operating mass | 9200 kg (20282.53lbs) |
| Max. Operating mass | 9600 kg (21164.38lbs) |

Figure 4-2: Dimensions Top View

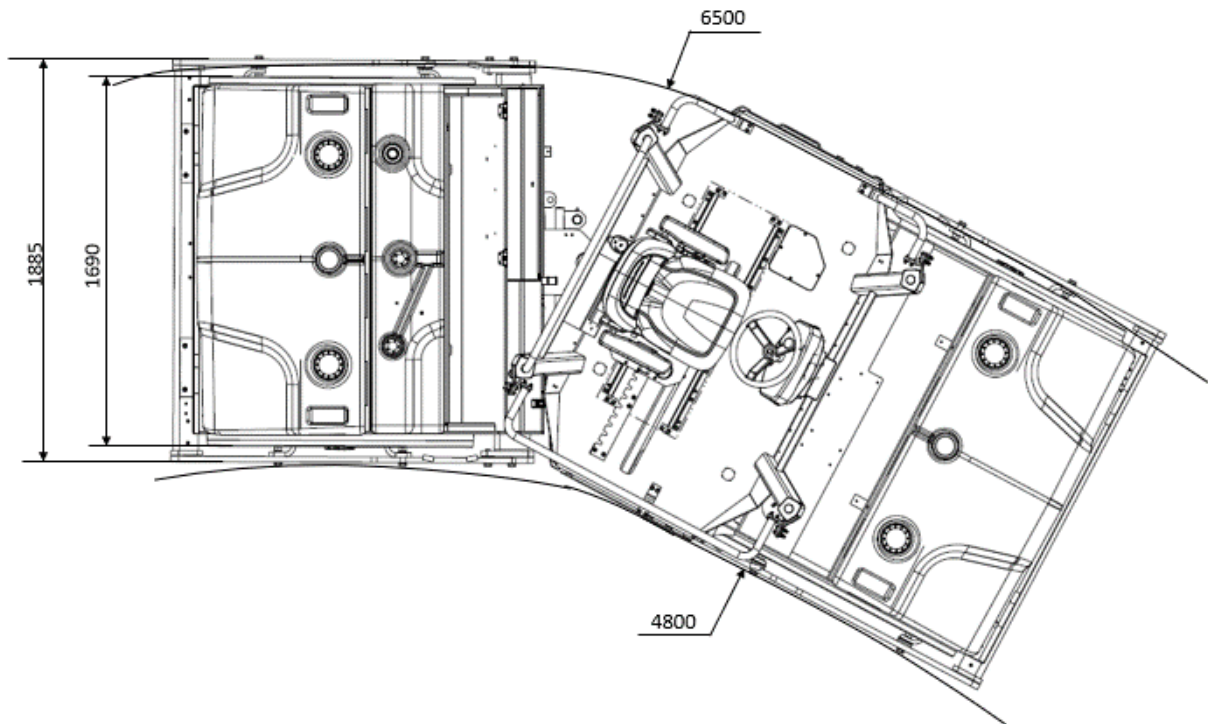


Table 4-2: Weight and Dimensions Top View

| | |
|----------------------|--------------------|
| Turning radius outer | 6500 mm (255.9 in) |
| Turning radius inner | 4800 mm (188.9 in) |
| Drum width | 1690 mm (66.5 in) |
| Steering angle | +/- 28 degree |

Diesel Engine

Table 4-3: Diesel Engine

| Engine | Model | HP (kW) rpm |
|---------|-----------|------------------------|
| Dynapac | 4R1040 NA | 76HP (56kW) @ 2200 rpm |

Fluid Volume

Table 4-4: Fluid Volumes

| | |
|----------------------------|----------------------|
| Fuel tank | 180 L (47.55 gal) |
| Water tank | |
| Front side | 400 L (105.6 gal) |
| Rear side | 400 L (105.6 gal) |
| Hydraulic Oil | 75 L (17.1 gal) |
| Hydraulic tank | 62 L (16.4 gal) |
| Hydraulic system | 13 L (3.4 gal) |
| Drum oil | 14 L (3.7 gal) each |
| Drum Gearbox oil | 2.2 L (0.58gal) each |
| Coolant - Premixed coolant | 18.5 L (4.89 gal) |

Working Capacity

Table 4-5: Working Capacity

| | |
|--------------------------|-----------------------------------|
| Static linear load front | 27.2 kg/cm |
| Static linear load rear | 27.2 kg/cm |
| Amplitude | 0.9 mm / 0.4 mm (0.036 / 0.01 in) |
| Vibration frequency | 36 Hz / 54 Hz |
| Centrifugal force | 130 KN / 60 KN |

Hydraulic System

Table 4-6: Hydraulic System

| Opening pressure (Absolute pressure) | MPa | Bar |
|--------------------------------------|------|-----|
| Drive system | 35.0 | 350 |
| Vibration system | 35.0 | 350 |
| Steering system | 15.0 | 150 |
| Charge pressure | 2.5 | 25 |
| Brake release | 2.5 | 25 |

This page is intentionally left blank


Section 5: Operation Controls

5.1 Instruments and Controls

This section provides basic information about the operating controls, instruments, and indicators located on the consoles and around the roller.

The operator console is located in front of the operator seat under the steering wheel. The slim profile and quick opening side panels provide easy access for maintenance and service.

Figure 5-1: DRA90 Console

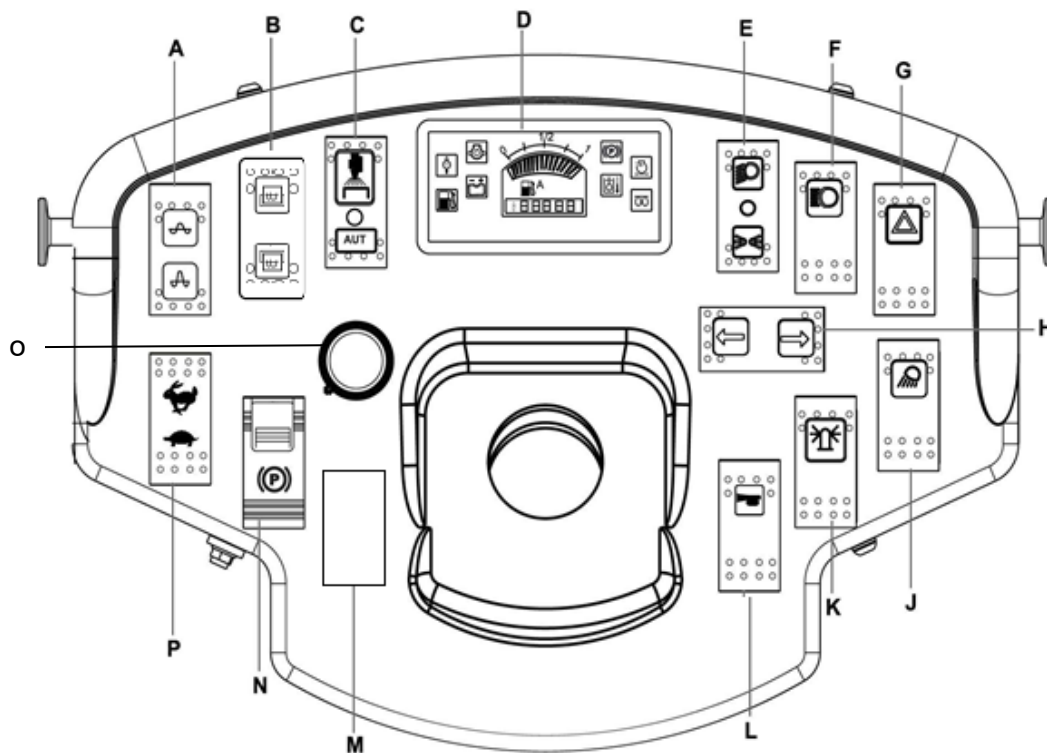


- | | | | |
|---|----------------------------|---|----------------------------|
| A | Vibration Hi/Low | H | Direction indicators |
| B | Vibration manual/automatic | J | Working light |
| C | Manual/automatic sprinker | K | Rotating Beacon (Optional) |
| D | Control panel | L | Horn |
| E | Driving lights | M | Plug |
| F | High beam | N | Parking brake On/Off |
| G | Hazard warning lights | P | Speed |
| O | Potentiometer | | |

Starter Switch

The Starter switch starts and stops the engine. There are three positions in the starter switch:

- OFF: All the electric systems and the engine are switched off, and the key can be removed.
- ON: Engine is on Run mode. Charging circuit and lamp circuit are energized.
- Start: The engine cranks. Make sure to allow the switch to ON position until the engine is started.

Figure 5-2: Starter Switch

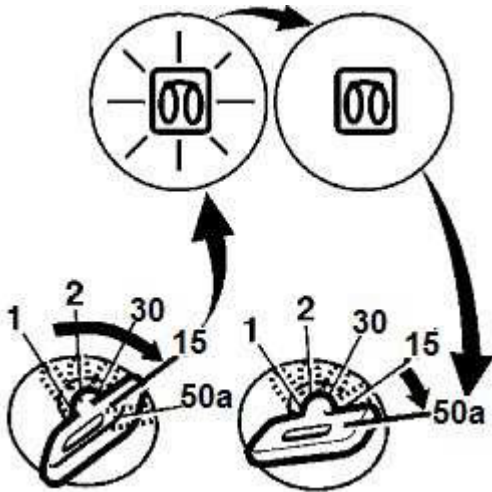


- | | | |
|----------------|------|--|
| 1 Off position | 30 | Start position to supply power to the instruments and controls |
| 2 On position | 15 | Hold position |
| | 50 a | Starter motor activation. |

Throttle Lever

The Throttle lever regulates the speed of the engine. In the forward position, the engine idles and in the backward position the engine runs at full speed.

Figure 5-3: Throttle Lever

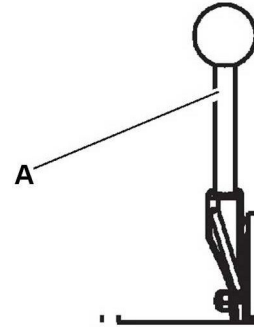


- A Throttle lever

Vibration On/Off Switch

The Vibration On/Off switch is a push button used for vibration. Press and release the switch to turn on the vibration and press again to turn off.

Figure 5-4: Vibration On/Off Switch

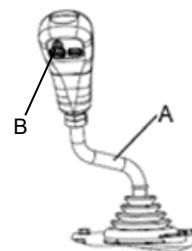


- A FNR Lever
B Vibration On/Off Switch

Emergency Stop

The Emergency stop button is used to stop the engine in an emergency situation which cannot be shut off in a usual manner. It switches off the engine and activates the brakes. The emergency stop aborts the entire control operation in a quicker way for the personnel safety.

Figure 5-5: Emergency Stop

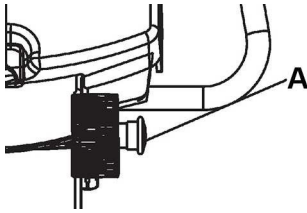


A Emergency stop button

Forward/Reverse (FNR) Lever

The direction of travel and speed of the roller is regulated with the forward/reverse (FNR) lever. The roller speed increases or decreases in proportion to the lever position.


Figure 5-6: FNR Lever

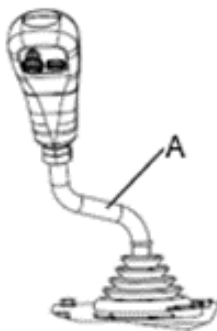

A FNR lever

Sprinkler Switch


Figure 5-7: Sprinkler Switch

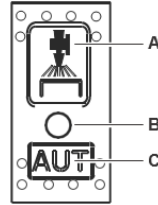

- A Upper position
- B Intermediate position
- C Lower position

| | |
|-----------------------|--|
| Upper position | Switches on the flow of water to drum. |
| Intermediate position | Switches off the sprinkle. |
| Lower position | Switches on the flow of water to drum by using forward or reverse lever. The flow of water is controlled by setting the sprinkler timer. |

Figure 5-8: Sprinkler Switch

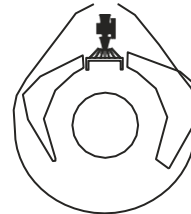

Press AUTO for variable adjustment of the water flow from 0 to 100%.

Seat Buzzer


The Seat buzzer beeps if the operator is not seated during the operation of the roller and it continues to beep until the operator sits on the seat. If the buzzer beeps for long the brakes are activated and engine is forced to stop.

Horn Button

The Horn button is located on the switch assembly.

Press the button to activate the horn.


Figure 5-9: Horn Button

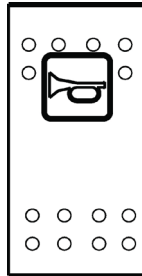

Vibration High/Low Switch

In the upper position, the High amplitude is switched on or off with the switch on the forward/reverse lever. The function is activated with the switch. In the intermediate position the vibration system is completely switched off. In the lower position the Low amplitude is switched on or off with the switch on the forward/reverse lever.

Figure 5-10: Vibration Hi/Low Switch

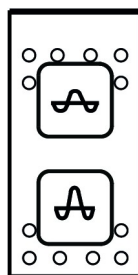


Vibration Selector Switch

Depending on the Vibration selector switch position, the vibration is activated in the following places.

| | |
|------------------------|--|
| Upper position | Activates vibration on front drum. |
| Intermediated position | Activates vibration on front and rear drums. |
| Lower position | Activates vibration on rear drum. |

Figure 5-11: Vibration Selector Switch

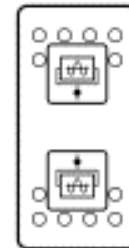


Fuse Box

The fuse box is located on the control column that contains the fuses for the electrical system. Fuses protect the electrical components from short circuit damage. Refer to electrical system for the description and function of fuses.

Driving Lights Switch

| | |
|-----------------------|--------------------------|
| Push Up position | Turns on driving lights. |
| Intermediate position | Turns off all lights. |
| Depress position | Turns on parking lights. |

Figure 5-12: Driving Lights Switch

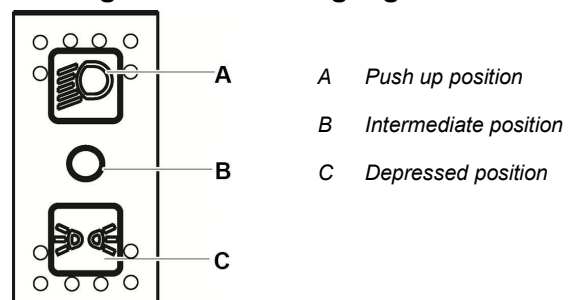

Working Light Switch

Depress the Working light switch to turn on the working lights.

Figure 5-13: Working Lights




Hazard Warning Lights Switch

The hazard warning lights are primarily used to warn other vehicles that there is a problem either with the roller, or there is a hazard in front of roller causing the operator to reduce the speed quickly.

Depress the switch to turn on the hazard warning lights.

Figure 5-14: Hazard Warning Lights

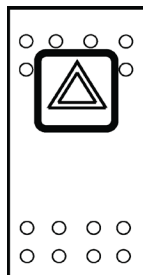


Rotating Beacon Switch (Optional)

The rotating beacon lighting is generally used to warn the approaching vehicle of potential hazards, such as roller that is stopped or moving slower than the rate of the traffic.

Depress the switch to turn on the rotating beacon.


Figure 5-15: Rotating Beacon Switch

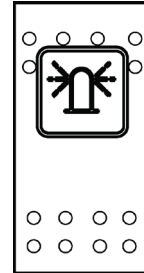

Direction Indicator Switch

The direction indicators are blinking lamps mounted near the left and right, front, and rear corners of the roller. Depress the Direction indicator switch to either left or right to turn on the left or right indicators. In the intermediate position the function is shut off.

Figure 5-16: Directional Indicator Lights

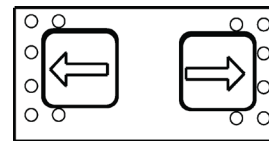


Parking Brake On/Off Switch

The Parking brake ON/Off switch is used to activate the parking brake.


Note Parking brake must be activated while starting the engine. Always activate the parking brake when the roller is stationary on a sloping surface.

Figure 5-17: Parking Brake On/Off Switch

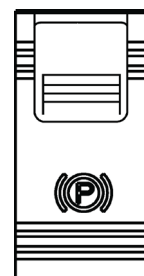

Control Panel

Figure 5-18: Control Panel

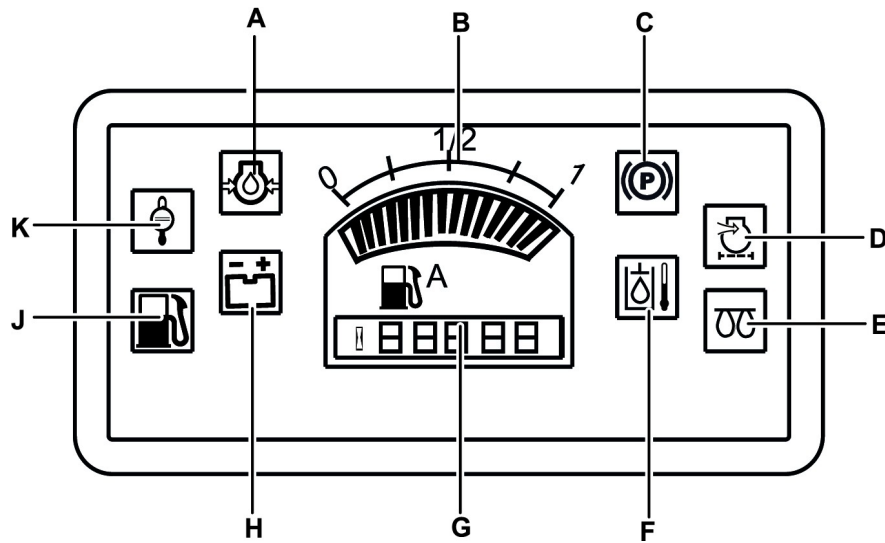





- | | | | |
|---|-------------------------|---|-------------------------------------|
| A | Oil pressure indicator | F | Hydraulic oil temperature indicator |
| B | Fuel level indicator | G | Hour meter |
| C | Parking brake indicator | H | Battery/charging indicator |
| D | Air filter indicator | J | Low fuel level indicator |
| E | Glow plug indicator | K | Engine water temperature indicator |

Control Panel Warnings Symbols

Warning lights turn on when the starter switch is turned to the on position and turn off when the engine is started. If the lights turn on even when the engine is running indicates a faulty condition.







Table 5-1: Warning Lights

| Designation | Function | Description |
|---|---|---|
|  | Battery charging indicator. | If the lamp does not illuminate when ignition is switched on, or if it illuminates after engine is started then the battery is not charging. Contact the maintenance personnel if the lamp illuminates during trammimg. |
|  | Diesel engine lubricating oil pressure indicator. | If the pressure is too low, the lamp illuminates and the parking brake is applied. In this event, switch off the engine immediately and rectify the cause. Contact the maintenance personnel. |
|  | Diesel engine water temperature indicator. | The lamp illuminates when the temperature is too high. Switch off the engine immediately and contact the maintenance personnel if the lamp illuminates during trammimg. |
|  | Low fuel level indicator. | The lamp illuminates if the oil level is low in the fuel tank. |

Control Panel Notification Symbols

Notifications are displayed when the starter switch is turned to the on position and notifies those corresponding systems are operating.

Table 5-2: Notification Lights

| Designation | Function | Description |
|---|-------------------------------------|--|
|  | Parking brake indicator | The lamp illuminates when the parking brake is activated. |
|  | The fuel level gauge | The fuel level gauge monitors the fuel level in the fuel tanks of the roller. The fuel gauge is shown in increments of 0, 1/4, 1/2, 3/4, and 1. When the indicator needle shows 1/4, fill the fuel tank. |
|  | Hour meter | The hour meter displays the number of hours the engine has run. |
|  | Glow plug indicator | Glow Plug indicator illuminates momentarily (for approximately 5 seconds.) once ignition is switched on. |
|  | Air filter indicator | When the engine is running at full speed, the indicator illuminates for air filter clean or replacement. Clean or replace the air filter on illumination. |
|  | Hydraulic oil temperature indicator | The indicator illuminates when hydraulic oil temperature increases beyond 103 to 106 °C (217.4 to 222.8 °F). When this indicator illuminates, stop the engine and find the fault. |

Section 6: Inspections and Operations

6.1 General Information

Note If you are not experienced with the roller controls, read and understand **Section 5 - Operation Controls**.

The following operational hints should be observed:

- Do not speed the engine when it is cold.
- Do not lubricate the roller while the engine is running.
- Always perform safety checks prior to starting the roller.
- Never stop the roller on a slope or surface that is liable to collapse.
- Never stop the roller against a high wall that is liable to collapse or cause a crushing risk.
- Before starting the engine, make sure all operator controls are either in off or neutral positions and the parking brake is applied.
- Always sound the horn before moving the roller in any direction to alert the personnel and to allow sufficient time before putting the roller in motion.
- Always judge when driving on unstable surfaces where there may be a risk of overturning or when loading onto a transporter where there is a risk of overturning. Always use a spotter.

General Checks

- Do general checks for any wear and tear on the roller.
- Check for broken or cracked welds, loose or missing bolts broken or inoperative gauges, or any other irregularities which could lead to more costly breakdowns.
- Check oil levels before starting the roller.
- Check all bolted assemblies for tightness.
- Check the entire roller for any loose, worn, or missing parts and replace them as needed.
- Check fluid lines, hoses, filler openings, drain plugs, pressure caps, tires, tower cables, hoistwire cables, muffler, engine, safety shrouds, and the area under the roller for signs of leakage.

Note Frequently walk around the roller and inspect for leaks, loose or missing parts, damaged parts, or parts out of adjustment. Perform all recommended daily maintenance.

Operator Areas

- Keep operator areas, mirrors, and all lights clean. Check for all lights function.
- Make sure the operator areas, steps, and grab rails are clean. Oil, grease, snow, ice, or mud in these areas can be slippery. Clean the boots of excess mud before getting on the roller.

Check Engine Oil Level




- *Hot oil and hot components can cause personal injury. Do not allow hot oil or hot components to contact the skin.*
- *Never operate the engine with the oil level below the low (L) mark or above the high (H) mark.*

Note Wait for at least five minutes after shutting off the engine to check the oil level. This allows time for the oil to drain into the oil pan.

1. Level the roller. The roller must be level when checking the oil level to make sure the measurement is correct.
2. Shut off the engine.
3. Check the engine oil level by viewing the engine dipstick.
4. If the oil level is low, add oil through the fill cap.

Figure 6-1: Engine Oil Dipstick

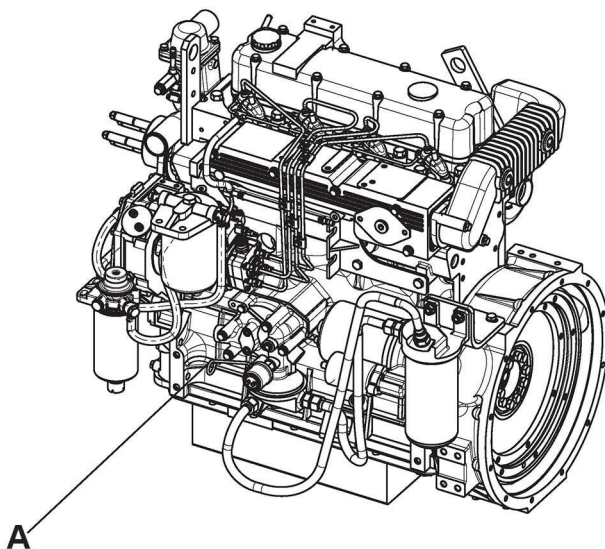

A Engine Oil Dipstick

Check Engine Coolant Level

Check the coolant level through level plug of expansion tank. Fill the cooling system when coolant is empty. With the engine cold, top off with premixed coolant of the desired freeze protection concentration. Add coolant through the pressure cap neck of the surge tank.



Always shut off the engine and allow to cool before removing the radiator cap. Remove cap slowly to relieve pressure. Avoid contact with steam or escaping fluid.



Removing the radiator cap on a hot radiator can cause scalding coolant to spray out and burn the body badly. If the engine has been in operation within the previous 30 minutes, be very careful in removing the radiator cap. Protect face, hands, and arms against escaping fluid and steam by covering the cap with a large, thick rag. If you see any steam or coolant escaping, do not try to remove it until the radiator cools down. If nothing is escaping, remove the cap very slowly and be careful. Be ready to step away if any steam or coolant begins to escape. Inhibitor contains alkali. Avoid contact with skin and eyes.



Engine coolant must be properly maintained to protect against engine damage. Coolant must be tested at regular intervals to make sure it can provide adequate protection against freezing, boiling, and corrosion. It is the owner's responsibility to know the type of coolant used and to maintain it properly.

If coolant must be added, use cool super plus or equivalent in a 50-50 mixture with water. It must be used year-round in all climates. Refer to instructions in **7.5 Maintenance as Required** for the correct procedures.

Check Fuel Level



Fuel is flammable and may cause serious injury or death. Shut off the engine, extinguish all open flames, and do not smoke while filling the tank. Always wipe any spilled fuel.

Check fuel level on the fuel level gauge, located on the roller dashboard. Refill the tank when the indicator needle moves to below 1/4 tank. Refer to the maintenance procedures in **Section 7 - Maintenance**. Select the proper grade of fuel oil in accordance with the instructions given in the *Lubrication Table* in **Section 7 - Maintenance**.

Maintain fuel tank(s) at a high level to minimize water condensation inside the tank(s). This is best accomplished by filling the fuel tanks at the end of each shift or day. Check the fuel tank for possible leaks. Because of the potential fire hazard, leaks must be corrected as soon as they are spotted.

1. Check the fuel level by reading the fuel level gauge.
2. Do not allow fuel tank to get emptied, otherwise the entire fuel system will require bleeding.
3. If the fuel level is low, add clean-filtered fuel.
4. Fill the tank with the correct grade of fuel. Refer to *Lubrication Table* for more fuel details.

Check Batteries



Batteries contain an acid and can cause injury. Battery fumes can ignite and explode. Do not smoke when observing battery fluid level. Skin and eye contact with battery fluid can cause injury. Avoid skin and eye contact with battery fluid. If contact occurs, flush area immediately with water.

Check the battery posts and cables for corrosion. Check and keep the electrolyte levels above the battery plates or to the bottom of the fill holes. Refer to **Section 7 - Maintenance** for the correct procedures.

Verify the Controls

Before starting the roller, check that the Warning lights, Backup alarm, Horn and Emergency stop controls are functioning properly. This inspection should be performed before each shift and at every startup.



If any controls, instruments, or devices do not function correctly, report the defects to the proper personnel. Defects must be corrected before starting and operating the roller.

6.2 Before Starting the Engine


Remember to carry out daily maintenance before starting the engine.

Refer to **Section 7 - Maintenance**.

Consider the following points before starting the engine:

1. Before starting the engine, check inside, outside, and underneath the roller for people or obstructions.
2. Turn the Battery disconnecter key (located on the right side of the operator compartment) to the on position. This supplies the roller with the power.

Figure 6-2: Battery Disconnecter

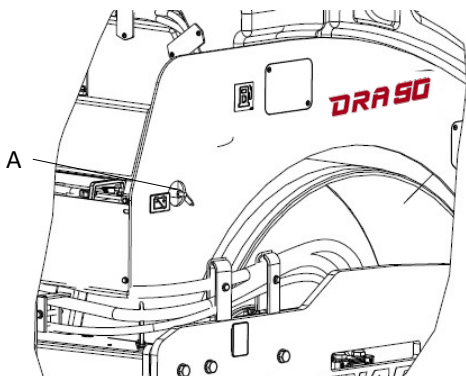

A Battery disconnecter

3. Check for warnings on the controls.
4. Start the engine only from the operator position.



Do not leave the operator platform when running the engine and roller.



If any controls, instruments, or devices do not function correctly report the defects to the proper personnel. Defects must be corrected before starting and operating the roller.


Seat (Standard) Adjustment

Adjust the operator seat to the comfortable position so that the controls are within easy reach.

The seat is adjusted in the following way:

- **Length adjustment:** Pull the length adjustment lever and move the seat forward or back.

Figure 6-3: Seat Adjustments

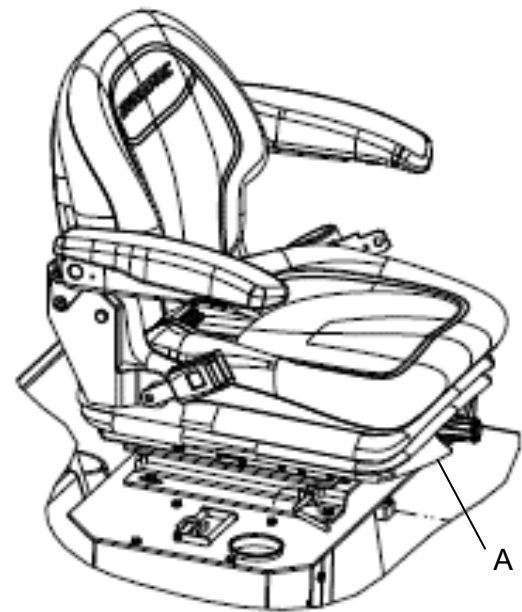

A Length adjustment

Check the Instruments and Lamps

Note Make sure that the Emergency stop is pulled out and the parking brake is activated. If the forward/reverse lever is in neutral, the automatic brake function is engaged.

1. Turn on the switch.
2. Check that the warning lamps in the warning panel illuminates.
3. Set the sprinkler switch to the operating position and check for the system is functioning.

Interlock


The roller is equipped with interlock. The diesel engine switches off after 10 seconds, if the operator gets off the seat during tramming. If the operator is not seated during tramming a buzzer goes on until the parking brake is activated.

6.3 Operating the Roller

Operation

1. Before the roller startup, a pre-operational general inspection of the roller must be performed in accordance with those instructions previously mentioned and, in the instructions, found in **Section 7 - Maintenance**.
2. Make sure all operator controls are either Off or in the neutral position and all control console gauges read zero.

Figure 6-4: Operator Consoles

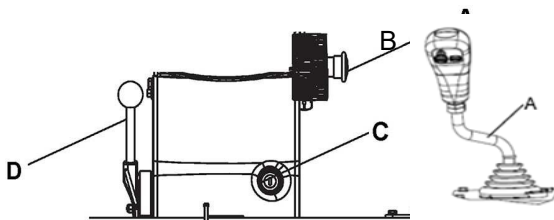


- | | | | |
|---|------------------|---|-----------------|
| A | FNR Lever | C | Ignition switch |
| B | Emergency switch | D | Throttle lever |

3. Make sure the Emergency stop button is not activated.
4. The FNR lever must be in neutral position.
5. The Parking brake switch must be in the engaged condition.


6. Make sure the Throttle lever is turned to backward position.

Figure 6-5: Throttle Lever

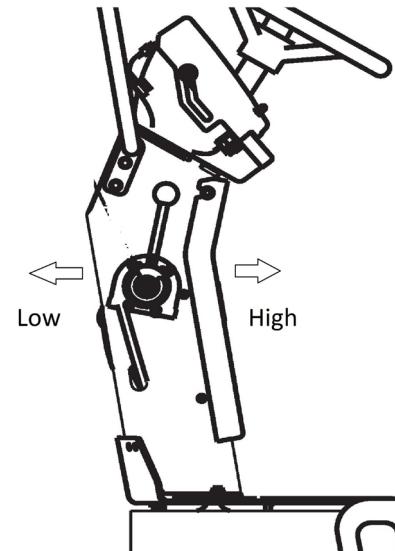

7. Set the vibration switch for high/low vibration position. The operator must activate the vibration using the switch on the forward/reverse lever grip.

Figure 6-6: Vibration High/Low Switches

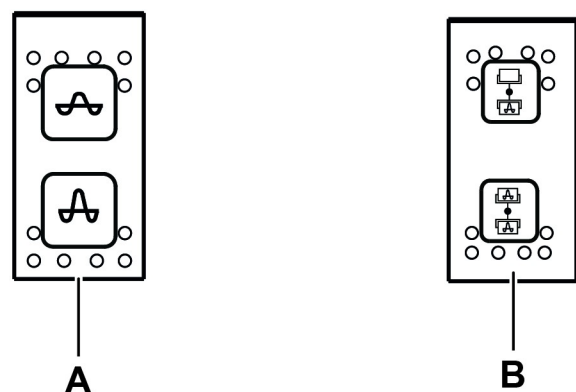


- | | | | |
|---|---------------------------|---|--------------------------------|
| A | Vibration high/low switch | B | Vibration Drum selector switch |
|---|---------------------------|---|--------------------------------|

Note As a general rule, do not operate the starter motor more than 30 seconds at a time without pausing to allow the starter motor to cool for at least two minutes. Overheating caused by excessive cranking will seriously damage the starter motor.

8. Turn on the Ignition switch. Check all the warning lamps and then crank the engine.
9. Allow the engine to warm up at idle speed for few minutes. Warm up time should be extended when extremely low ambient conditions (cold weather) occur or when battery power is depleted during initial startup.
10. Check the engine air cleaner indicator gauge to determine if the elements require servicing.
11. Make sure the parking brake is released and the parking lights goes off.

Figure 6-7: Parking Brake

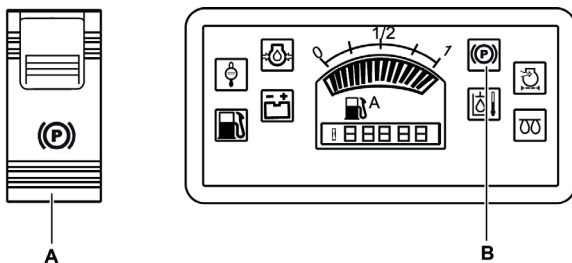

- A Parking brake button
B Parking brake indicator

Vibration on Selected Drum

1. Activate the Vibration selector switch to activate vibration for the front drum, rear drum, or for two drums.
2. Vibration selector is activated by using the switch in the FNR Lever.
 - In the upper position the vibration is activated on front drum.
 - In the middle position the vibration is activated for both front and rear drums
 - In the lower position the vibration is activated for rear drum.

Braking

Normal Braking

1. Turn off the vibration by pressing the Vibration control button on the FNR lever.
2. Set the FNR lever to the neutral position and apply brake to stop the roller.

Note In cold climatic condition braking distances can be longer than the normal distance.

Note Never leave the operator platform without activating the parking brake.

Emergency Braking

To hold the roller in the Stop position (parked), use the mechanical parking brake on each drum drive motor. The mechanical parking brakes are spring-activated and hydraulically released type brakes.

1. In case of emergency, push in the Emergency stop button, hold the steering wheel firmly and be prepared for a sudden stop. The diesel engine stops.
2. After emergency braking, reset the FNR lever to neutral position, pull out the Emergency stop and activate the parking brake. Restart the engine.

Switching Off

1. Press the Vibration control button to the off position.
2. Set the FNR lever to the neutral position.
3. Turn the Throttle lever to forward position and allow the engine to idle for a few minutes to cool.
4. Press the Parking brake button to activate the parking brake. Always activate the parking brake before leaving the roller.

Note If the roller must be parked on a sloping surface, chock the drums with wedges to prevent any movement.

5. Check instruments and warning lamps to see if any faults are indicated. Switch off all lights and other electrical functions.
6. Turn the Starter switch to the off position to stop the engine.
7. Switch off the battery disconnecter and remove the key.

6.4 Lifting and Handling


Locking the Articulation

Note Lock the steering joint, before lifting the roller.

1. Turn the steering wheel to the straight-ahead position.
2. Switch off the roller and activate the parking brake.
3. Pull out the lowermost locking pin which has a wire attached. Pull up the locking dowel which also has a wire attached.
4. Fold out the locking arm and secure it to the upper locking lug on steering joint.
5. Fit the locking stub in the holes through the locking arm and locking lug and secure the stud in position with the locking pin.

Note Remember to refit the lock bar in its holder after operation.

Figure 6-8: Locking the articulation

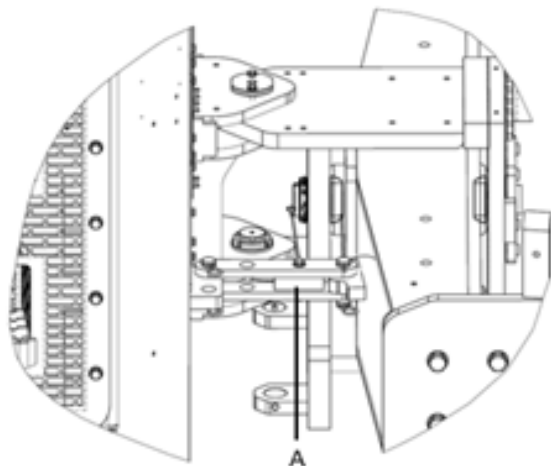


A Lock bar

Lifting the Roller

- Use a crane/forklift to lift the equipment.
- Pay attention when lifting and balancing the equipment.
- Seek a person to guide the way when lifting and moving the equipment.
- An experienced crane/forklift driver should drive the crane/forklift.
- When lifting, add a pad at the joint of steel cable of the crane and the hook hole and secure the hole.

Note The weight of the roller is shown on the lifting plate. Refer to **Section 4 - Specifications**.

Figure 6-9: Lifting the roller

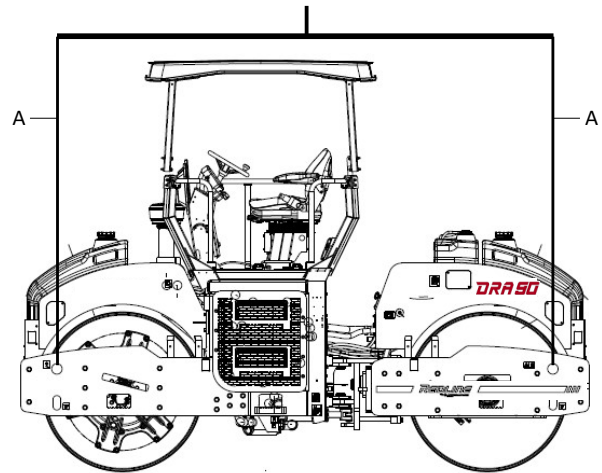


A Lifting plate


6.5 Towing the Roller


Towing Information


Proper equipment must be used to prevent damage to the vehicle and the roller during any tow. Follow the state and local laws applying to vehicles.

If the vehicle is to be towed by a wrecker, use only equipment designed for this purpose following the instructions of the wrecker manufacturer. A safety chain system must be used.

 *Personal injury or death could result when towing a disabled roller incorrectly.*

 *Block the drums of the roller to prevent movement before releasing the emergency brake system or the disc brake in each drive motor must be disengaged mechanically before the roller can be towed. The roller can roll free if drum is not blocked.*

 *Follow the recommendations below to properly perform the towing procedure.*

 *Make sure to block the drums of the roller and reapply the emergency brake system before disconnecting from the towing vehicle.*

Note Maximum towing speed is 2 mph (3 Kmph).

Towing

The roller can be moved up to 300 meters (1,000 ft) using the instructions below.


Note Chock the drum to prevent the roller from moving when the brakes are hydraulically disengaged.

Release the Brakes

The disc brake in each drive motor must be disengaged mechanically, according to the following instructions, before the roller can be towed.

1. Open the right door of the engine compartment to access the propulsion pump.
2. Unscrew the nut by holding the Allen screw 2.
3. Unscrew the Allen screw.

Figure 6-10: Unscrew Step

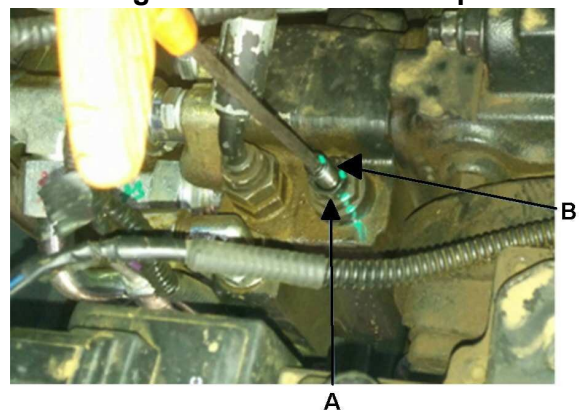


A Nut

B Allen screw

4. Tighten the knob clockwise

Figure 6-11: Tighten Step

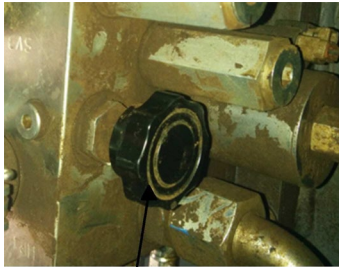

C

C Knob

5. Operate the lever for 10 to 12 times to manually release the brake.

Figure 6-12: Brake Release Step




D

D Lever

Engaging the Brakes

1. Turn knob 3 counter clockwise after towing.
2. Tighten the Allen screw 2 to original position and then tighten nut 3.

Figure 6-13: Towing

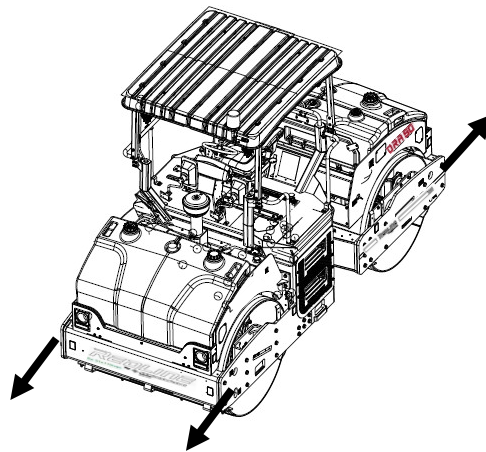

6.6 Transporting the Roller

Transportation Procedures

Safety Precautions

Before moving the roller on public roads, check for instructions and information with respect to traffic regulations regarding construction machinery.

The roller must be driven and transported only in accordance with the operating instructions.

1. When driving the roller, observe the prescribed transport position, admissible speed, and itinerary.
2. Do not attempt to drive unless knowledgeable and experienced.
3. Always know the overall height, weight, width, and length of the roller. Make sure there is sufficient clearance when crossing underpasses, bridges, and tunnels or when passing under overhead lines.
4. When moving the roller on public access roads, obey all traffic regulations and make sure that proper clearance flags, lights, and warning signs, including the slow-moving vehicle emblem, are properly displayed. Know your approximate stopping distance at any given speed. Never turn corners at excessive speeds. Look in all directions before reversing the direction of travel.

Operator Checklist

- Make sure to know the vehicle and its equipment and how to use it safely.
- See that mirrors, and lights are clean and unobstructed.
- Check for fluid leaks.
- Check lights and reflectors.
- Check oil and coolant levels.

Start Up


1. Before starting the engine, check inside, outside, and underneath the roller for people or obstructions.
2. Always horn before starting the roller to alert everyone in the area.
3. Check all the gauges (including fuel).
4. Check for excessive noise or vibration.

Before Driving

1. Fasten the seat belts.
2. Adjust each mirror so that the side of the vehicle is visible in the side of the mirror closest to the vehicle. This helps you determine the relation to objects seen in the mirror.
3. Release the parking brake.

Roller preparation for Transport

Figure 6-14: Securing for Loading

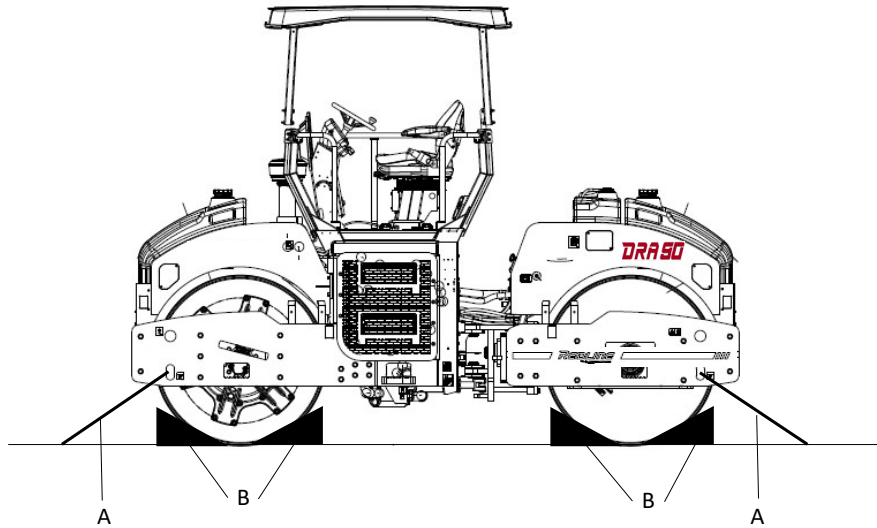

A Lashing wire

B Chocks

1. Chock the drums securely.
2. Support the drum frame firmly to prevent overloading of the rubber suspension of the drum.
3. Anchor the roller securely with lashing wire at all the four corners.

Figure 6-15: Securing the Vibratory Roller for Transport

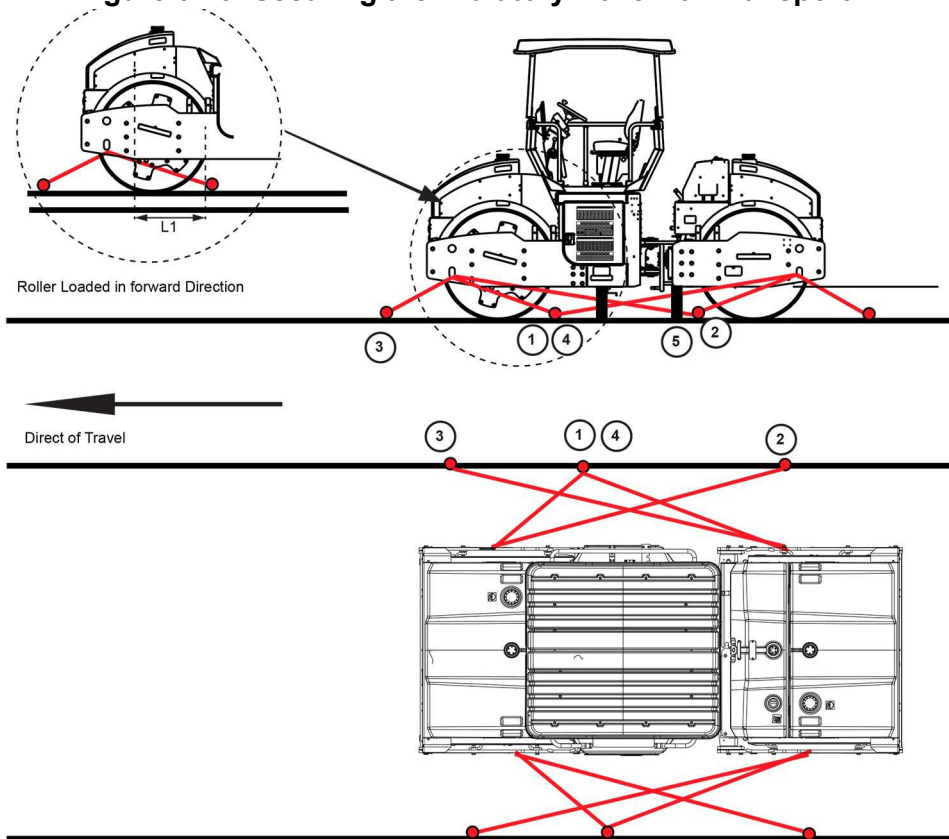


Table 6-1: Lashings' Permitted Distance

| The lashings' permitted distance interval in meters | | |
|--|--|--|
| (1 - 4: Double lashings, LC at least 1.7 tons (1700 daN), STF 300 kg (300daN)) | | |
| Double L ₁ - L ₂ | Double L ₃ - L ₄ | |
| 0,6 - 3,0 | 0,1 - 3,0 | |

The distance L₁ above is between points D and E. D is the projected point directly at right angles laterally in relation to the edge of the platform from the lashing mount C on the roller. E is the lashing mount at the edge of the platform. L₂ - L₃ have a corresponding relationship.

Note – “Shown Pictorial view may not be the same as actual machine view”

6.7 Special Conditions

Cold Weather Conditions

- Refer to **Section 7 - 7.3 Refill Capacities/Lubricants** in the maintenance section for information regarding cold weather lubricants, hydraulic fluids, coolants, fuel, and the like.
- Use winter grade diesel fuel for operation at subzero temperatures.
- Be extremely careful when using cold weather starting aids. Starting aids are very flammable and should only be used if needed.
- Remove batteries and store in a warm area to about 20 °C/68 °F (68 °F).

Hot Weather Conditions

- Monitor temperature gauges.
- Keep cooling fins on radiator and oil cooler clean and free of accumulated dirt.

High Altitude Conditions

- Be aware that engine power will be reduced.
- Keep cooling fins on radiator and oil cooler clean and free of accumulated dirt.

Note Contact the engine dealer for fuel system adjustment before working on high altitude condition.


Long-term Parking

Observe the following when storing the roller for short periods of time.

- Remove the battery/batteries from the roller, clean and charge once a month.
- Cover the air cleaner (**Refer Section 7 - Maintenance**) or its opening with plastic or tape.
- Also cover the exhaust pipe opening. This is to avoid moisture entering the engine.
- Fill the fuel tank fully to prevent condensation.
- Fill the hydraulic reservoir to the uppermost level mark.
- Empty the water tank completely to avoid fouling.

-
- Lubricate the steering joint bearings and both bearings on the steering cylinder with grease. Grease the steering cylinder piston with conservation grease. Grease the hinges on the doors to the engine compartment and the cab. Grease both ends of the forward/reverse control (bright parts).
 - Change all lubricants and fluids that may have deteriorated with use.
 - Replace and secure all weatherproof covers.

Figure 6-16: Long Term Parking

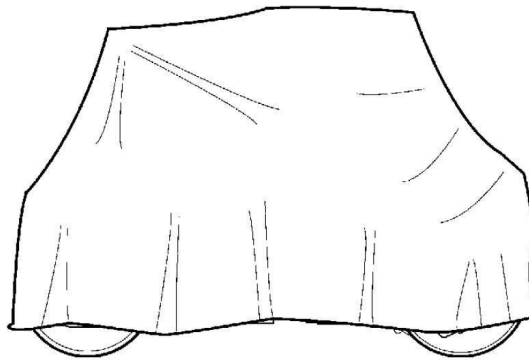

Section 7: Maintenance

7.1 General Information

Safety should be the main concern for anyone working on or around the roller. Do not perform any function that could put someone in danger.

Always wear proper safety gear while working on or around the roller. This includes an approved hard hat, safety glasses, steel toe shoes, gloves, respirator, and ear protection. Do not wear loose fitting clothing that can get caught in rotating components.

Note If not experienced with the roller controls and instruments, read, and understand Operation Controls.

The following operational hints are observed:

- Do not speed the engine when it is cold.
- Always chock the drum if there is a possibility of uncontrolled movement.
- Do not lubricate the roller while the engine is running.
- Always perform safety checks prior to starting and using the roller.
- Always operate the roller at the full engine power.
- Never propel or stop the roller on a slope or surface that could possibly collapse.
- Never stop the roller against a high wall that could possibly collapse or cause a crushing risk.
- Before starting the engine all the controls are in the off or neutral position on the operator control panel.
- Always sound the attention horn before moving the roller in either direction to alert personnel and allow sufficient time before putting the roller in motion.

7.2 Maintenance Schedule

Maintenance Schedule Information

The maintenance schedule shows those items requiring regular service and the interval at which they are performed. A regular service program is geared to the items listed under each interval. These intervals are based on average operating conditions. Before each consecutive interval is performed, all of the maintenance requirements from the previous interval must also be performed.

Note In the event of extremely severe, dusty, or wet operating conditions, more frequent maintenance than specified is necessary.

Table 7-1: Maintenance Daily/Every 10 Hours

| Description | Action | Lubrication |
|---------------------------|---|-----------------------|
| Engine oil | Check level | |
| Engine primary air filter | Check Vacuum Indicator - change it if shows Chocking. | |
| Radiator coolant | Check level | |
| Hydraulic oil | Check level | |
| Greasing | Grease | See lubrication chart |
| Diesel | Check level | |
| Water tank | Check level | |
| Sprinkler Nozzle | Check water spray | |
| Operator seat slider | Check | |
| Scrapper setting | Check | |
| Functioning of brake | Check | |

Table 7-2: Maintenance at First 50 Hours

| Description | Action | Lubrication |
|------------------------|--------|-------------------|
| Engine oil filter | Change | See engine manual |
| Engine oil | Change | See engine manual |
| Fuel filter | Change | See engine manual |
| Water separator filter | Change | See engine manual |
| Hydraulic oil filter | Change | |
| Drum gear oil | Change | |

Table 7-3: Maintenance at 50 Hours or Weekly

| Description | Action | Lubrication |
|------------------------------|---------------|--------------------|
| Drum gear oil | Check level | |
| Air cleaner element | Check | |
| Leakages at hose and adopter | Check | |

Table 7-4: Maintenance at 250 Hours/750 Hours/Three Months

| Description | Action | Lubrication |
|-----------------------------|-------------|-------------|
| Battery and lead connection | Check | |
| Engine Oil | Change | |
| Drum Oil | Check level | |

Table 7-5: Maintenance at 500 Hours/Six Months

| Description | Action | Lubrication |
|---------------------------|--------------------------------------|-------------------|
| Engine oil filter | Change | See engine manual |
| Engine oil | Change | See engine manual |
| Fuel filter | Change | See engine manual |
| Water Separator | Change | See engine manual |
| Drum oil | Check level | |
| AVM bolts | Check for tightness | |
| Drum AVM | Check for any crack and deformation. | |
| Hydraulic reservoir cover | Check for any leakage | |
| Air Filter – Primary | Change | |

Table 7-6: Maintenance at 1,000 Hours/One Year

| Description | Action | Lubrication |
|------------------------------|---|-------------------|
| Engine oil filter | Change | See engine manual |
| Engine oil | Change | See engine manual |
| Fuel filter | Change | See engine manual |
| Water separator filter | Change | See engine manual |
| Engine primary air filter | Change | See engine manual |
| Safety filter | Change | See engine manual |
| Engine drive V-belt | Check | |
| Valve cover gasket | Check | |
| ROC cleaning | Check Delta T (clean if required internally). | |
| Fuel pipe and clamps | Check for tightness of clamps. | |
| Valve clearance | Check | See engine manual |
| Hydraulic oil filter element | Change | |
| Drum oil | Change | |
| Drum gear oil | Change | |

Table 7-7: Maintenance at 2,000 Hours/Two Years

| Description | Action | Lubrication |
|------------------------------|-----------------|--------------------|
| Engine oil filter | Change | See engine manual |
| Engine oil | Change | See engine manual |
| Fuel filter | Change | See engine manual |
| Water separator | Change | See engine manual |
| Engine primary air filter | Change | |
| Safety filter | Change | |
| Valve cover gasket | Check | |
| Engine Drive V-belt | Check | |
| Hydraulic oil | Change | |
| Hydraulic oil filter element | Change | |
| Drum oil | Change | |
| Fuel tank | Drain and clean | |
| Drum gear oil | Change | |
| Articulation | Check | |
| Water tank | Drain and clean | |

7.3 Refill Capacities/Lubricants

General Information

Lubrication is an essential part of preventive maintenance, affecting to a great extent the useful life of the unit. Periodic lubrication of the moving parts reduces to a minimum the possibility of the mechanical failures.

The lubrication chart that follows in this section shows those items requiring regular service and the interval at which they should be performed. Details concerning the oil and other lubricants follow the lubrication chart. A regular service program should be geared to the items listed under each interval. These intervals are based on the average operating conditions. In the event of extremely severe, dusty, or wet operating conditions, more frequent lubrication than specified may be necessary.

- Specific recommendations of the brand and grade of lubricants are not made here due to regional availability, operating conditions, and also the continual development of the improved products. For more information, refer to component manufacturer's manual.
- All the oil levels are to be checked with the roller parked on a level surface and while the oil is cold, unless otherwise specified.
- On plug type check points, the oil levels are to be at the bottom edge of the check port.
- All the grease fittings are SAE standard unless otherwise indicated. Grease the non-sealed fittings until the grease is seen extruding from the fitting. One ounce (28 grams) of EP-MPG equals one pump on a standard one-pound (0.45 kg) grease gun.
- Over lubrication on the non-sealed fittings will not harm the fittings or components, but under-lubrication will definitely lead to a shorter lifetime.
- Grease fittings that are worn and do not hold the grease gun or those that have a stuck check ball must be replaced.

To prevent the minor irregularities from developing into serious conditions, several other services or checks are recommended for the same intervals as the periodic lubrication:

- Thoroughly wash all fittings, caps, plugs, and the like with a non-flammable and non-toxic cleaning solution before servicing to prevent dirt from entering while performing the service. During the regular lubrication service, visually check the entire unit with regard to cap screws, nuts, and bolts being properly secured.
- Spot check the several cap screws and the nuts for proper torque. If any are found loose, a more thorough investigation must be made.
- If a defect is detected, that requires special service, stop the roller operation until the defect has been corrected. If necessary, contact the Dynapac representative for assistance.

Lubrication Chart

Periodic lubrication requirements are listed in the following Lubrication Chart. These requirements include lubricant checks and greasing designated areas of the roller.













| Description | Part Number | Remarks | Quantity |
|---------------|-------------|------------------------|--------------------|
| Engine oil | 4812161855 | Dynapac engine oil 200 | 5 L (1.3 gallons) |
| Hydraulic oil | 4812161868 | Dynapac hydraulic 300 | 20 L (5.3 gallons) |
| Drum oil | 4812161887 | Dynapac Drum oil 1000 | 5L (1.3 gallons) |
| Coolant | 4812161854 | Dynapac coolant 100 | 20 L (5.3 gallons) |
| Drum gear oil | 4812161879 | Dynapac Gear oil 200 | 5L (1.3 gallons) |

Refill Capacities

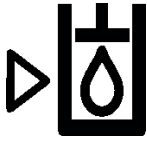The following fluid capacities are provided for the servicing personnel who must perform roller maintenance in the remote locations where complete shop facilities and resources are not available. These capacities will give the servicing personnel an approximation of the fluid capacities of the components to be serviced. Always use the specified method to check for accurate fluid levels.

| Component | Approx. Quantity |
|---------------------------|------------------------------|
| Systems | |
| Hydraulic Tank | 75 L (14.5 gallons) |
| Water tank front side | 400 L (105.6 gallons) |
| Water tank rear side | 400 L (105.6 gallons) |
| Drum gear box oil | 2.2 L Per side (0.58 gallon) |
| Engine | |
| Engine Coolant (Premixed) | 18.5L (4.9 gal) |
| Engine Oil Capacity | 12 L (3.2 gallons) |
| Fuel Tank | 180 L (47.5 gallons) |
| Drum | 14 L (3.71.3 gallons) each |

Table 7-8: Maintenance Symbols

| Symbol | Description | Symbol | Description |
|---|---------------------------|---|-----------------|
|  | Engine oil level |  | Air filter |
|  | Engine oil filter |  | Battery |
|  | Hydraulic reservoir level |  | Sprinkler |
|  | Hydraulic fluid filter |  | Sprinkler water |
|  | Drum oil level |  | Recycling |
|  | Lubrication oil |  | Fuel filter |

7.4 Standard Torque Values



Use only the proper tools (inches) on hardware. Other tools may not fit properly and may slip and cause injury.

Head Markings

Fasteners should be replaced with the same grade or a higher grade. If higher grade fasteners are used, these should only be tightened to the strength of the original grade fastener.

Do not use these values if a different torque value or the tightening procedure is listed for a specific application. Torque values listed are for general use only. All values are suggested maximum with dry plated hardware.

Make sure fastener threads are clean and you properly start thread engagement. This will prevent them from falling when tightening.

The following pages list the recommended tightening torques for the various size bolts used for the roller. Proper torque specifications should be used at all times.

Recommended Torques

This page lists the recommended tightening torques, in foot/pounds (ft·lb), for the various size bolts and nuts that are used. Proper torque specifications should be used at all times. Dry means clean dry threads and lube means a light film of oil. Excess oil in a threaded dead-end hole can create a hydraulic lock giving false torque readings. Suggested assembly torque values are per engineering specifications.

| M-thread Size | Metric coarse screw thread, bright galvanized (fzb): | | | | | |
|---------------|--|---------|------------|-----------|-------------|-----------|
| | 8.8 Oiled | 8.8 Dry | 10.9 Oiled | 10.9, Dry | 12.9, Oiled | 12.9, Dry |
| M6 | 8,4 | 9,4 | 12 | 13,4 | 14,6 | 16,3 |
| M8 | 21 | 23 | 28 | 32 | 34 | 38 |
| M10 | 40 | 45 | 56 | 62 | 68 | 76 |
| M12 | 70 | 78 | 98 | 110 | 117 | 131 |
| M14 | 110 | 123 | 156 | 174 | 187 | 208 |
| M16 | 169 | 190 | 240 | 270 | 290 | 320 |
| M20 | 330 | 370 | 470 | 520 | 560 | 620 |
| M22 | 446 | 497 | 626 | 699 | 752 | 839 |

| M-thread Size | Metric coarse screw thread, bright galvanized (fzb): | | | | | |
|---------------|--|---------|------------|-----------|-------------|-----------|
| | 8.8 Oiled | 8.8 Dry | 10.9 Oiled | 10.9, Dry | 12.9, Oiled | 12.9, Dry |
| M24 | 570 | 640 | 800 | 900 | 960 | 1080 |
| M30 | 1130 | 1260 | 1580 | 1770 | 1900 | 2100 |

| M-thread Size | Metric coarse thread, zinc treated (Dacromet/GEOMET) | | | |
|---------------|--|----------|------------|----------|
| | 10.9 Oiled | 10.9 Dry | 12.9 Oiled | 12.9 Dry |
| M6 | 120 | 150 | 146 | 183 |
| M8 | 28 | 36 | 34 | 43 |
| M10 | 56 | 70 | 68 | 86 |
| M12 | 98 | 124 | 117 | 147 |
| M14 | 156 | 196 | 187 | 234 |
| M16 | 240 | 304 | 290 | 360 |
| M20 | 470 | 585 | 560 | 698 |
| M22 | 626 | 786 | 752 | 944 |
| M24 | 800 | 1010 | 960 | 1215 |
| M30 | 1580 | 1990 | 1900 | 2360 |

| | |
|-------------------|---|
| Bolt dimensions | M16 (PN 902889) |
| Strength class | 10.9 |
| Tightening torque | 192 Nm, torque class 2 (Dacromet treated) |

7.5 Maintenance as Required

Service as Required

The preventive maintenance and service in this section requires attention on the need basis, before, during, and after the operation shift. This is in addition to the 8 to 10 hour daily routine maintenance procedures. Performance of this inspection can result in longer life and maximum productivity from the roller. Refer to the manufacturer's service manuals for maintenance and service on the carrier.

Clean the Roller

Clean the complete roller weekly. Daily cleaning is required if material is adhering to the roller working parts.

- Make sure that the operator areas, steps, and grab rails are clean. Oil, grease, snow, ice, or mud in these areas can cause to slip and fall. Clean the boots of excess mud before getting in the roller.
- Thoroughly wash all fittings, caps, plugs, and the like with a nonflammable, nontoxic cleaning solution before servicing to prevent dirt from entering while performing the service.
- After cleaning, check for defects in the air cleaner ducts.
 - a. Check intake for accumulation of debris that could restrict air flow.
 - b. Check the air cleaner mounting hardware for security.
 - c. Check all hoses for cracks, chafing, or deterioration and replace at the first sign of probable failure.

Loose Bolted Connections

If any loose nuts or bolts are found during the frequent walk-around and the daily inspections, make sure they are properly torqued. Refer to **7.4 Standard Torque Values** for the required torque for all bolt sizes and grades. Always replace self-locking nuts if they have been loosened.

Air Cleaners

The following are detailed instructions for performing routine maintenance procedures on the air cleaner.



Raw, unfiltered air can damage the roller. Never service the air cleaner while the roller is running.



Airborne dust may be hazardous. Wear proper personal protective equipment while handling air cleaners and elements.

Connections and Ducts

Check air cleaner and ducts for leaks before every shift, during every shift, and after every shift. Make sure all connections are tight and sealed.

Note Dust that gets by the air cleaner system can often be detected by looking for dust streaks on the air transfer tubing or just inside the intake manifold inlet.


Air Cleaner Pre- Cleaner

Wipe clean the inside of the cover and the filter housing. Wipe also both surfaces for the outlet pipe.

Note Check that the hose clamps between the filter housing and the suction hose are tight and that the hoses are intact. Inspect the entire hose system, all the way to the engine.

Figure 7-1: Pre-Cleaner

Wipe clean on both sides of the outlet pipe.

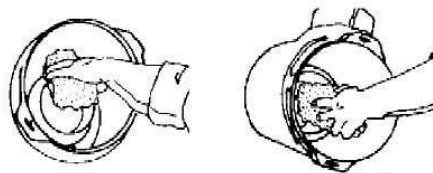

Inner edge of outlet pipe.

Outer edge of outlet pipe.




Never clean Dono-clone tubes with compressed air unless both the safety and primary elements are installed in the air cleaner. Do not steam clean the tubes in the pre-cleaner.

Air Cleaner Main Filter

The air cleaner is the dry type with two elements; a main filter that is replaceable and can be cleaned, and a backup filter that should only be replaced and never cleaned.

Figure 7-2: Air Cleaner Elements

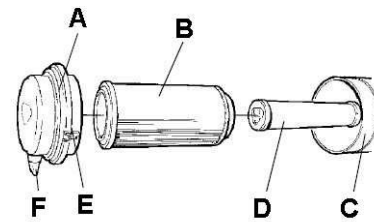

| | | | |
|---|----------------|---|---------------|
| A | Cover | D | Backup filter |
| B | Main filter | E | Clips |
| C | Filter housing | F | Dust valve |

When the choking (air filter) indicator illuminates do the following maintenance steps.

1. Unclip the clamps holding the main filter.
2. Carefully withdraw the main filter.

Note Do not clean the air filter until the indicator illuminates on the control panel. Cleaning the filter when there is no indication is not recommended.


Note Make sure new elements arrive enclosed in plastic or in a protective membrane. Do not install elements that are unprotected. This is a dust hazard.

Note Never attempt to clean a backup filter. Change the backup filter whenever main filter replaced.

3. Examine the new or newly cleaned main filter for torn or damaged pleats, bent end covers, liners, and gaskets.
4. The backup filter should be replaced if the air cleaner indicator is red after servicing the main filter.
5. Clean the inside of the air cleaner housing before removing backup filter.
6. To replace the backup filter, remove the old filter from the holder. Dispose of the used element properly.
7. Install new backup filter into the holder.

- Carefully install the cleaned or new main filter.

Figure 7-3: Air Filter

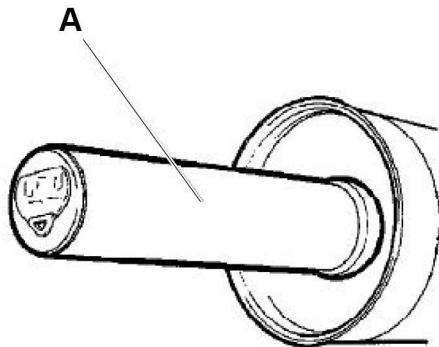

A Backup filter


- Re-install the back cover, make sure the dust valve is positioned downwards.
- Inspect all air intake piping and joints between the air cleaner and inspect the air inlet to make sure that no dusty air can enter.

Note Never leave the air cleaner open longer than necessary.

Note The two most common servicing problems are over servicing and improper servicing.

Cleaning the Filter Element

Figure 7-4: Filter Element Cleaning

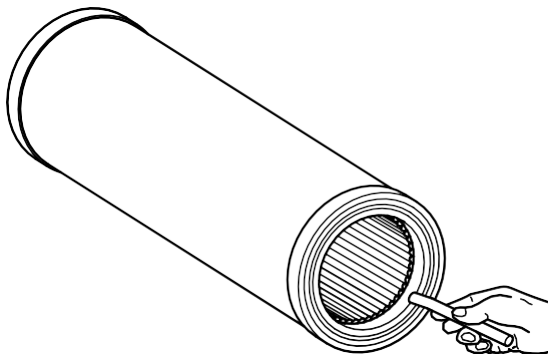


Clean the air filter element from inside to outside using compressed air.

Note Replace air filter element after two cleaning intervals

Air Circulation

Check that the engine has free circulation of cooling air through the grille in the engine compartment.

Figure 7-5: Air Circulation

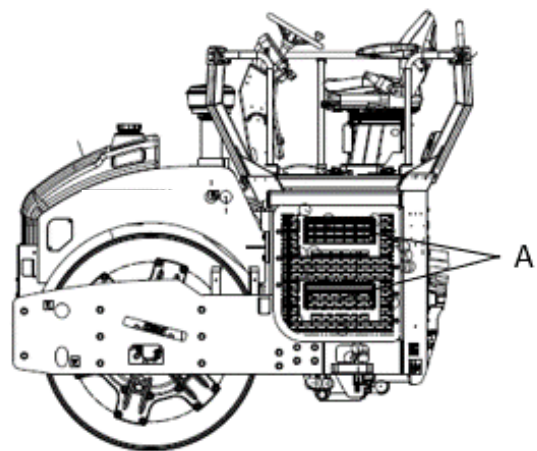

A Cooling air grille

Hose and Clamps

- Periodic clamping bolts re-tightening is necessary due to cold-flow present in all rubber hoses. Tighten the boss clamps.
- Examine and change out worn hoses and weakened Boss clamps. If hoses are to be changed out, change the Boss clamps also. Boss clamps hold the hose connections under a large amount of pressure. Boss clamps (including nuts and bolts) are for single use only. Do not reuse. Once removed, discard them.

Engine


Refer to the engine service and maintenance manuals for specific information on the engine maintenance.

Note Switch off the engine before filling the oil.

Note Care must be taken while draining the oil. Wear protective gloves and eye glasses.

1. Change the engine oil first 50 hours and then every 500 hours of operation.
2. Remove the oil filler cap and oil drain plug. Drain the oil into a suitable container.
3. Reinstall the drain plug and tighten.
4. Remove and replace the oil filter, fuel filter and water separator.

Figure 7-6: Oil & Fuel Filters

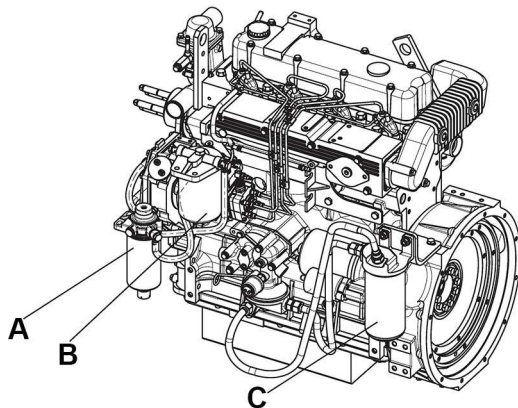

- A Fuel filter
- B Water separator
- C Engine oil filter

5. Remove the oil filler cap and fill the engine crank case with recommended oil.
6. Start the engine and allow it to idle for a few minutes. During this time, check around the oil filter and drain plug for leaks.
7. Install the oil filler cap.

Batteries

The following battery maintenance must be carried out as part of the 250-hour routine maintenance schedule.



Batteries contain an acid and can cause injury. Skin and eye contact with battery fluid can cause injury. Avoid skin and eye contact with battery fluid. If contact occurs, flush area immediately with water.



Battery fumes can ignite and explode. Do not smoke when observing battery fluid level.

Note When disconnecting the battery, always disconnect the negative cable first. When connecting the battery, always connect the positive cable first.

Note Always wear protective glasses when working with batteries. Wash hands after touching batteries and connectors. Use of gloves recommended.

Batteries, Clamps, and Cables

The standard batteries supplied are heavy duty lead acid type, requiring the following maintenance.

1. Keep the top of the batteries clean.
2. Clean the terminals.
3. Keep battery connections tight.
4. Apply a small amount of grease to the terminal connections to prevent corrosion.
5. Inspect the cables, clamps, and hold down brackets. Replace if necessary.

Check Electrolyte Level


1. Shut off the engine.
2. Lockout/tagout the roller as per the site-specific procedure.
3. Check the electrolyte level and keep the electrolyte level above the plates. Fluid level is low when below ring or ring is visible and too high when slots are not visible.
4. Refill with distilled water, if necessary.



Over filling can cause poor performance or early failure.

5. Remove lockout / tagout.

Figure 7-7: Battery Location

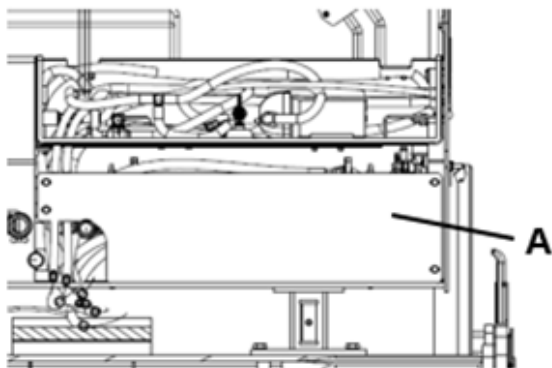

A Battery location

Fuel Tank

Refuel the tank every day before starting the roller.

1. Unscrew the lockable tank cap.
2. Fill diesel fuel to the lower edge of the filler pipe.

Check fuel tanks and fuel lines for possible leaks. Because of the potential fire hazard, leaks must be corrected as soon as they are spotted.




Fuel is flammable. May cause serious injury or death. Shut off the engine, extinguish all open flames, and do not smoke while filling the fuel tanks. Always wipe up any spilled fuel immediately.

- Check the fuel level by reading the fuel level gauge.
- Never allow fuel tanks to completely empty.

Note Fill tank with the correct grade of fuel.
The fuel tank holds 180 liters.

Figure 7-8: Fuel Tank

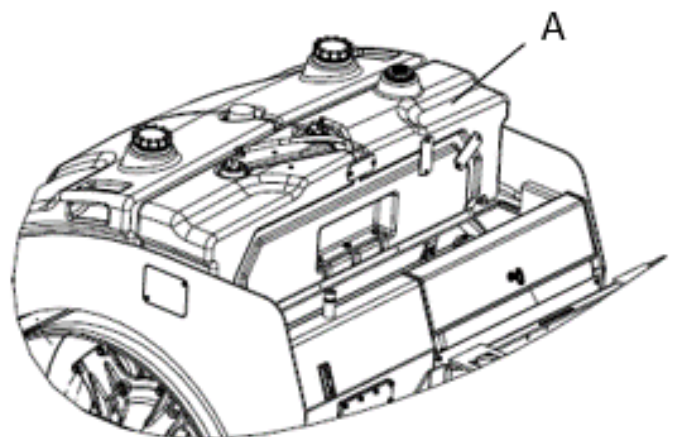


A Fuel tank

Coolant System

Check that all hoses/hose connectors are intact and tight. Fill with coolant as specified in the lubricant's specification.

Change the coolant every year. Failure to cool the engine properly can result in engine failure or severely reduce engine life.

Figure 7-9: Coolant Level Gauge

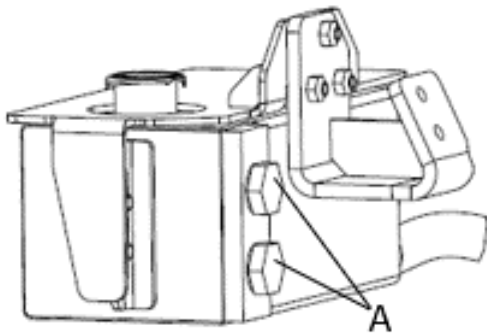

A Coolant level gauge



Personal injury can occur when removing the radiator cap. Steam or fluid escaping from the radiator can burn. Inhibitor contains alkali. Avoid contact with skin and eyes. Wear protective gloves and eye glass.




Always shut off the engine and allow it to cool down before removing the radiator cap. Remove the radiator cap slowly to relieve pressure. Avoid contact with steam or escaping fluid.

Water Tank

Unscrew the tank cap and fill with clean water. Do not remove the strainer. See technical specifications for the tank volume.

Note A small amount of environment-friendly antifreeze is added.

Figure 7-10: Water Tank

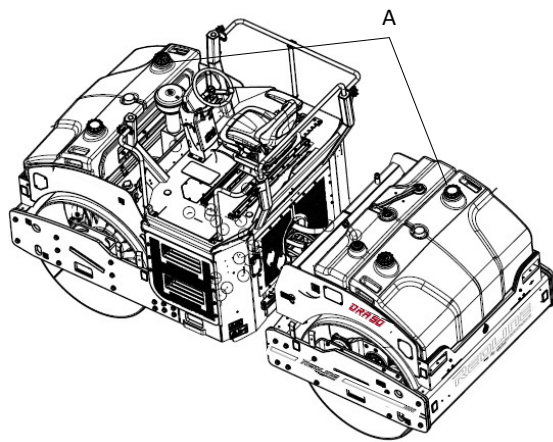

A Tank cap

Fixed Scrapers


Make sure that the scrapers are undamaged. Adjust the scrapers so that they are 1-2 mm from the drum. For special asphalt compounds, it may be better if the scraper blades lie lightly against the drums.

Asphalt remnants can accumulate on the scraper and affect the contact force. Clean as required.

1. Loosen the screws to adjust the contact pressure of the scraper blade against the drum.
2. Lock this setting by tightening the lock nut against the mounting plate.
3. Adjust the contact surface on both scraper attachments.

4. Tighten all the screws after adjustment.

Figure 7-11: Drum

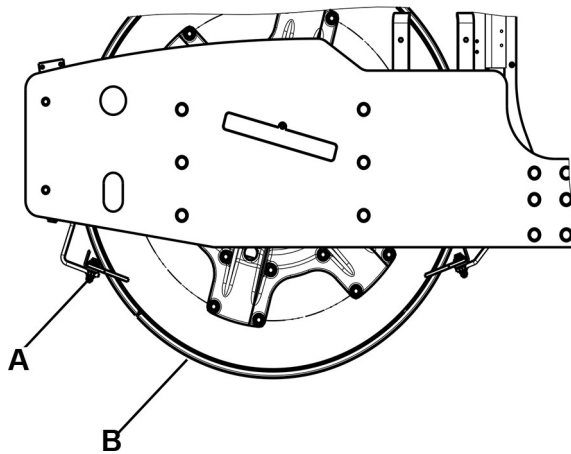

- A Scraper blade
- B Drum

The scrapers must be lifted from the drum during transport.

Brakes

Run the roller very slowly forward. Hold the steering wheel firmly and brace yourself for a sudden stop. Press in the emergency stop. The roller will stop abruptly and the engine will switch off. After testing the brakes, set the forward/reverse lever in neutral. Pull out the emergency stop. Start the engine. The roller is now ready for operation.

Sprinkler System

Start the sprinkler system and make sure that no nozzles are clogged. If necessary, clean clogged nozzles and the coarse filter located by the water pump.




The sprinkler system should be drained if there is a risk of freezing.

Wear protective eye glass when working with compressed air.

Dismantle the blocked nozzle by hand. Blow the nozzle and fine filter clean with compressed air or install replacement parts and clean the clogged parts later.

Figure 7-12: Sprinkler Pump

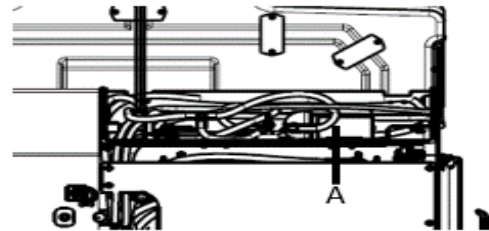

- A Sprinkler pump

7.6 Lubrication and Filters

Hydraulic Reservoir

The hydraulic reservoir oil level must be checked daily as part of the 8 to 10 hour routine maintenance procedure.



Excessive hydraulic oil can rupture hydraulic tank and cause injury or property damage.

Note Take extra care when working around or on the hydraulic system to make sure its complete cleanliness. When operating, the oil level must be between the maximum and minimum levels. Top up with hydraulic fluid as per lubricant specifications if level is too low.


Note Dirt in the hydraulic system will lead to premature component failure. A clean, contaminant free system is extremely important for the roller to function properly.

Check Hydraulic Oil Level

If the hydraulic oil level is low, add hydraulic oil.

1. Level the roller.
2. Check the reservoir oil level by viewing the sight gauge. Verify that fluid level is near the maximum level indicated on the sight glass.


Figure 7-13: Hydraulic Reservoir

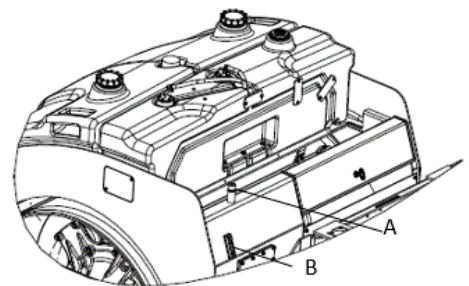

B Level Gauge

3. Open the engine hood and unscrew the filler cap, top up with hydraulic fluid (as per lubricant specification) if the level is too low.

Figure 7-14: Hydraulic fluid Refilling

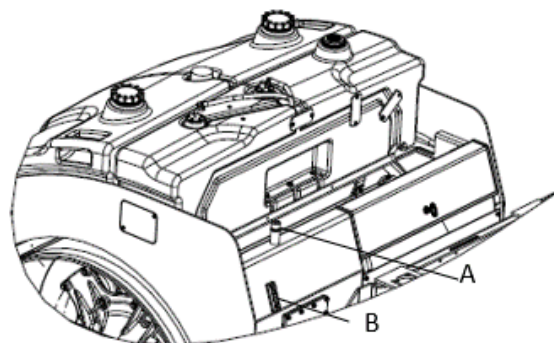


A Hydraulic oil filling B Oil level gauge

Steering Cylinder and Steering Joint

The steering cylinder is located under the operator platform. There is a grease fitting near the base and rod ends of the cylinder.

1. To access the four grease nipples, turn the steering wheel fully to the counterclockwise direction.
2. Wipe the grease nipples.
3. Apply five strokes of grease to each nipple using the hand-operated grease gun. Make sure that grease penetrates into the bearing. If grease does not penetrate into bearings, it may be necessary to relieve the articulation joint with a jack while repeating the greasing process.

Figure 7-15: Greasing

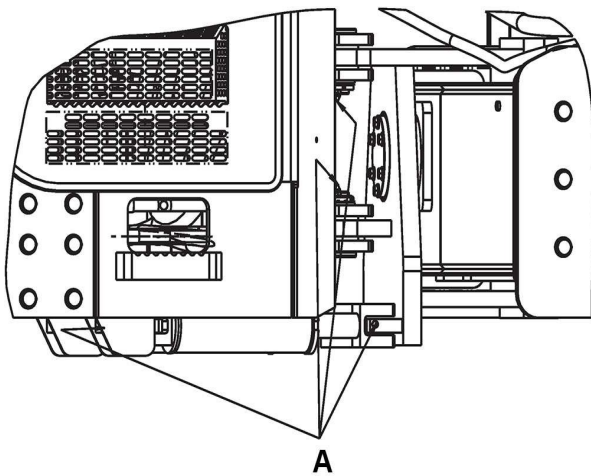


A Grease nipple

Drum - Oil Level

1. Run the roller slowly until the oil plug is opposite to one of the inspection holes.
2. Unscrew the plug and check that the oil level reaches up to the bottom of the hole. Top up with new oil if necessary. Use oil as per the lubricant specification.
3. Clean the magnetic oil plug from any metallic residue and refit the plug.

Figure 7-16: Drum Oil Filling

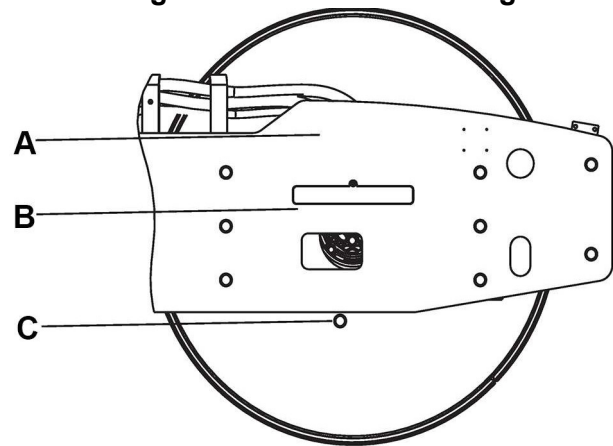


- A Oil filling
- B Oil level check
- C Oil drain

Check Drum Gear Oil Level

1. Move the roller until the inspection/filling holes are in position for filling.
2. Refill the oil about 1.1 L (0.3 gallons). Use transmission oil as per lubrication specification.
3. Make sure that oil level reaches up to the lower edge of the plug hole.
4. Clean and refit the plugs.

Figure 7-17: Drum Gear

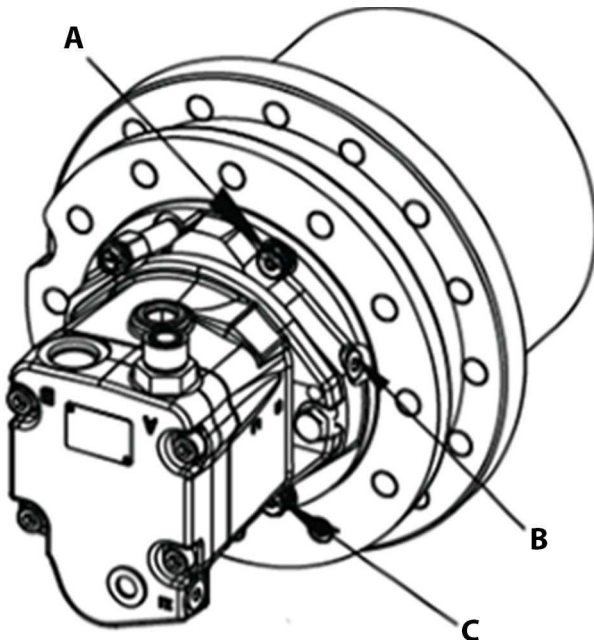

- A Oil filling plug
- B Oil level plug
- C Oil Drain plug

Controls

If the lever gets stiff after a prolonged period of use, remove the cover of the lever and lubricate.

Lubricate the forward/reverse lever in the engine compartment with a few drops of oil.

Housekeeping

The complete roller must be given a weekly cleaning. Daily cleaning will be required if material is adhering to the roller working parts.

1. Make sure the operator areas, steps, and grab rails are clean. Oil, grease, snow, ice, or mud in these areas can be slippery. Clean the boots of excess mud before getting in the cab or on the roller operator platform.
2. Check the tower feed installation for debris buildup around the sheaves.
3. Thoroughly wash all fittings, caps, plugs, and the like with a nonflammable, nontoxic cleaning solution before servicing to prevent dirt from entering while performing the service.

Note Protect all electrical components and control panels against entry of water or steam when using high pressure cleaning methods. Cover the fuel and hydraulic fill cap breathers located on each tank.

4. After cleaning, check for defects in the air cleaner ducts.
 - Check intake for accumulation of debris that could restrict air flow.
 - Check air cleaner mounting hardware for security.
 - Check all hoses for cracks, chafing, or deterioration and replace at the first sign of probable failure.

This page is intentionally left blank



www.dynapac.com

Dynapac road construction India Pvt Ltd.

Pune, India.